



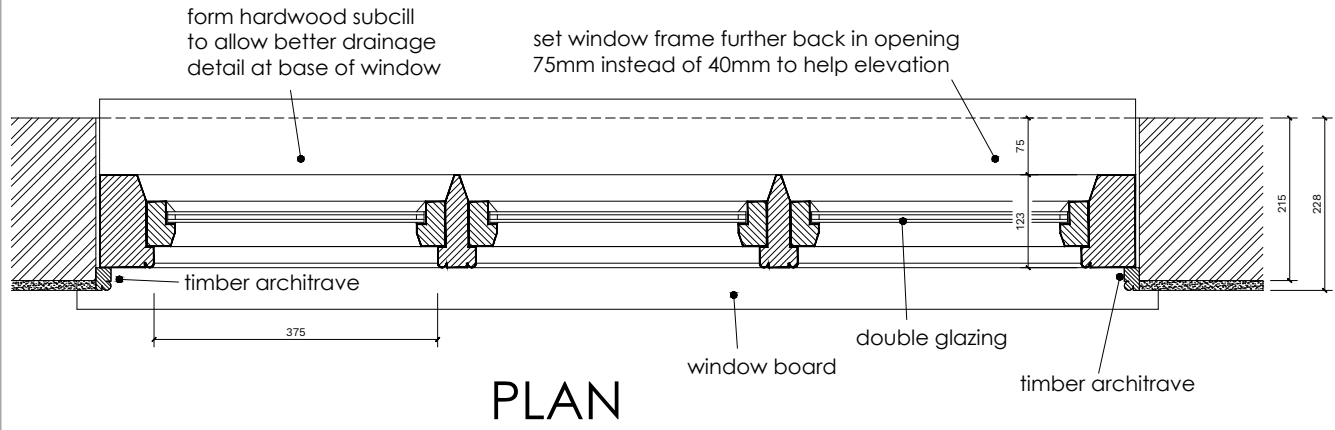

Treatment of exposed brickwork reveals
When cleaning brickwork use a detergent solution and apply to the brickwork using a nylon brush. Never use a wire brush or metal tools to clean, as this can damage the brick face. Avoid cleaning brickwork in very cold conditions, as the wet brickwork will freeze, which may cause damage. High pressure washing is not recommended for brickwork. Despite bricks being highly durable when designed and constructed correctly, brick surfaces and mortar joints can be damaged under high pressure, leaving the brickwork vulnerable to water penetration and frost attack.
Where there is any damage to newly exposed brickwork this should be carefully replaced with reclaimed bricks to match the existing bricks. Use of a suitable lime based mortar with colour & joint to match existing.

Installation of timber windows - Guidance Notes
Allow for a 10mm tolerance overall (5mm each side)
Before any fixings are used the window should be packed all four sides level and plum in the opening. When building-in a continuous support at cill level can be provided by a mortar bed.
Cill and head packing should be a maximum 150mm from each jamb and beneath each mullion.
Side fixings should be used at 150mm from the top and bottom of the frame, and a maximum 450mm between fixings.
Windows above 1800mm wide should also be fixed in the centre of the head and the cill
Fix into the brickwork using either a screw and anchor plug (8 x 120mm fixing recommended) or self tapping concrete anchor, ensure the fixing is at least 25mm into the brickwork, preferably 50mm. Both the frame and the brickwork will need to be drilled creating a pilot hole to fix into.
Fix the window through the frame, where possible using unobstructive locations. The fixings must be at the same point as the spacer to ensure the frame does not become distorted.
To prevent air infiltration between the window and the adjacent wall the gap should be sealed using an expanding foam seal. An additional seal can then be provided by a silicone based sealant.

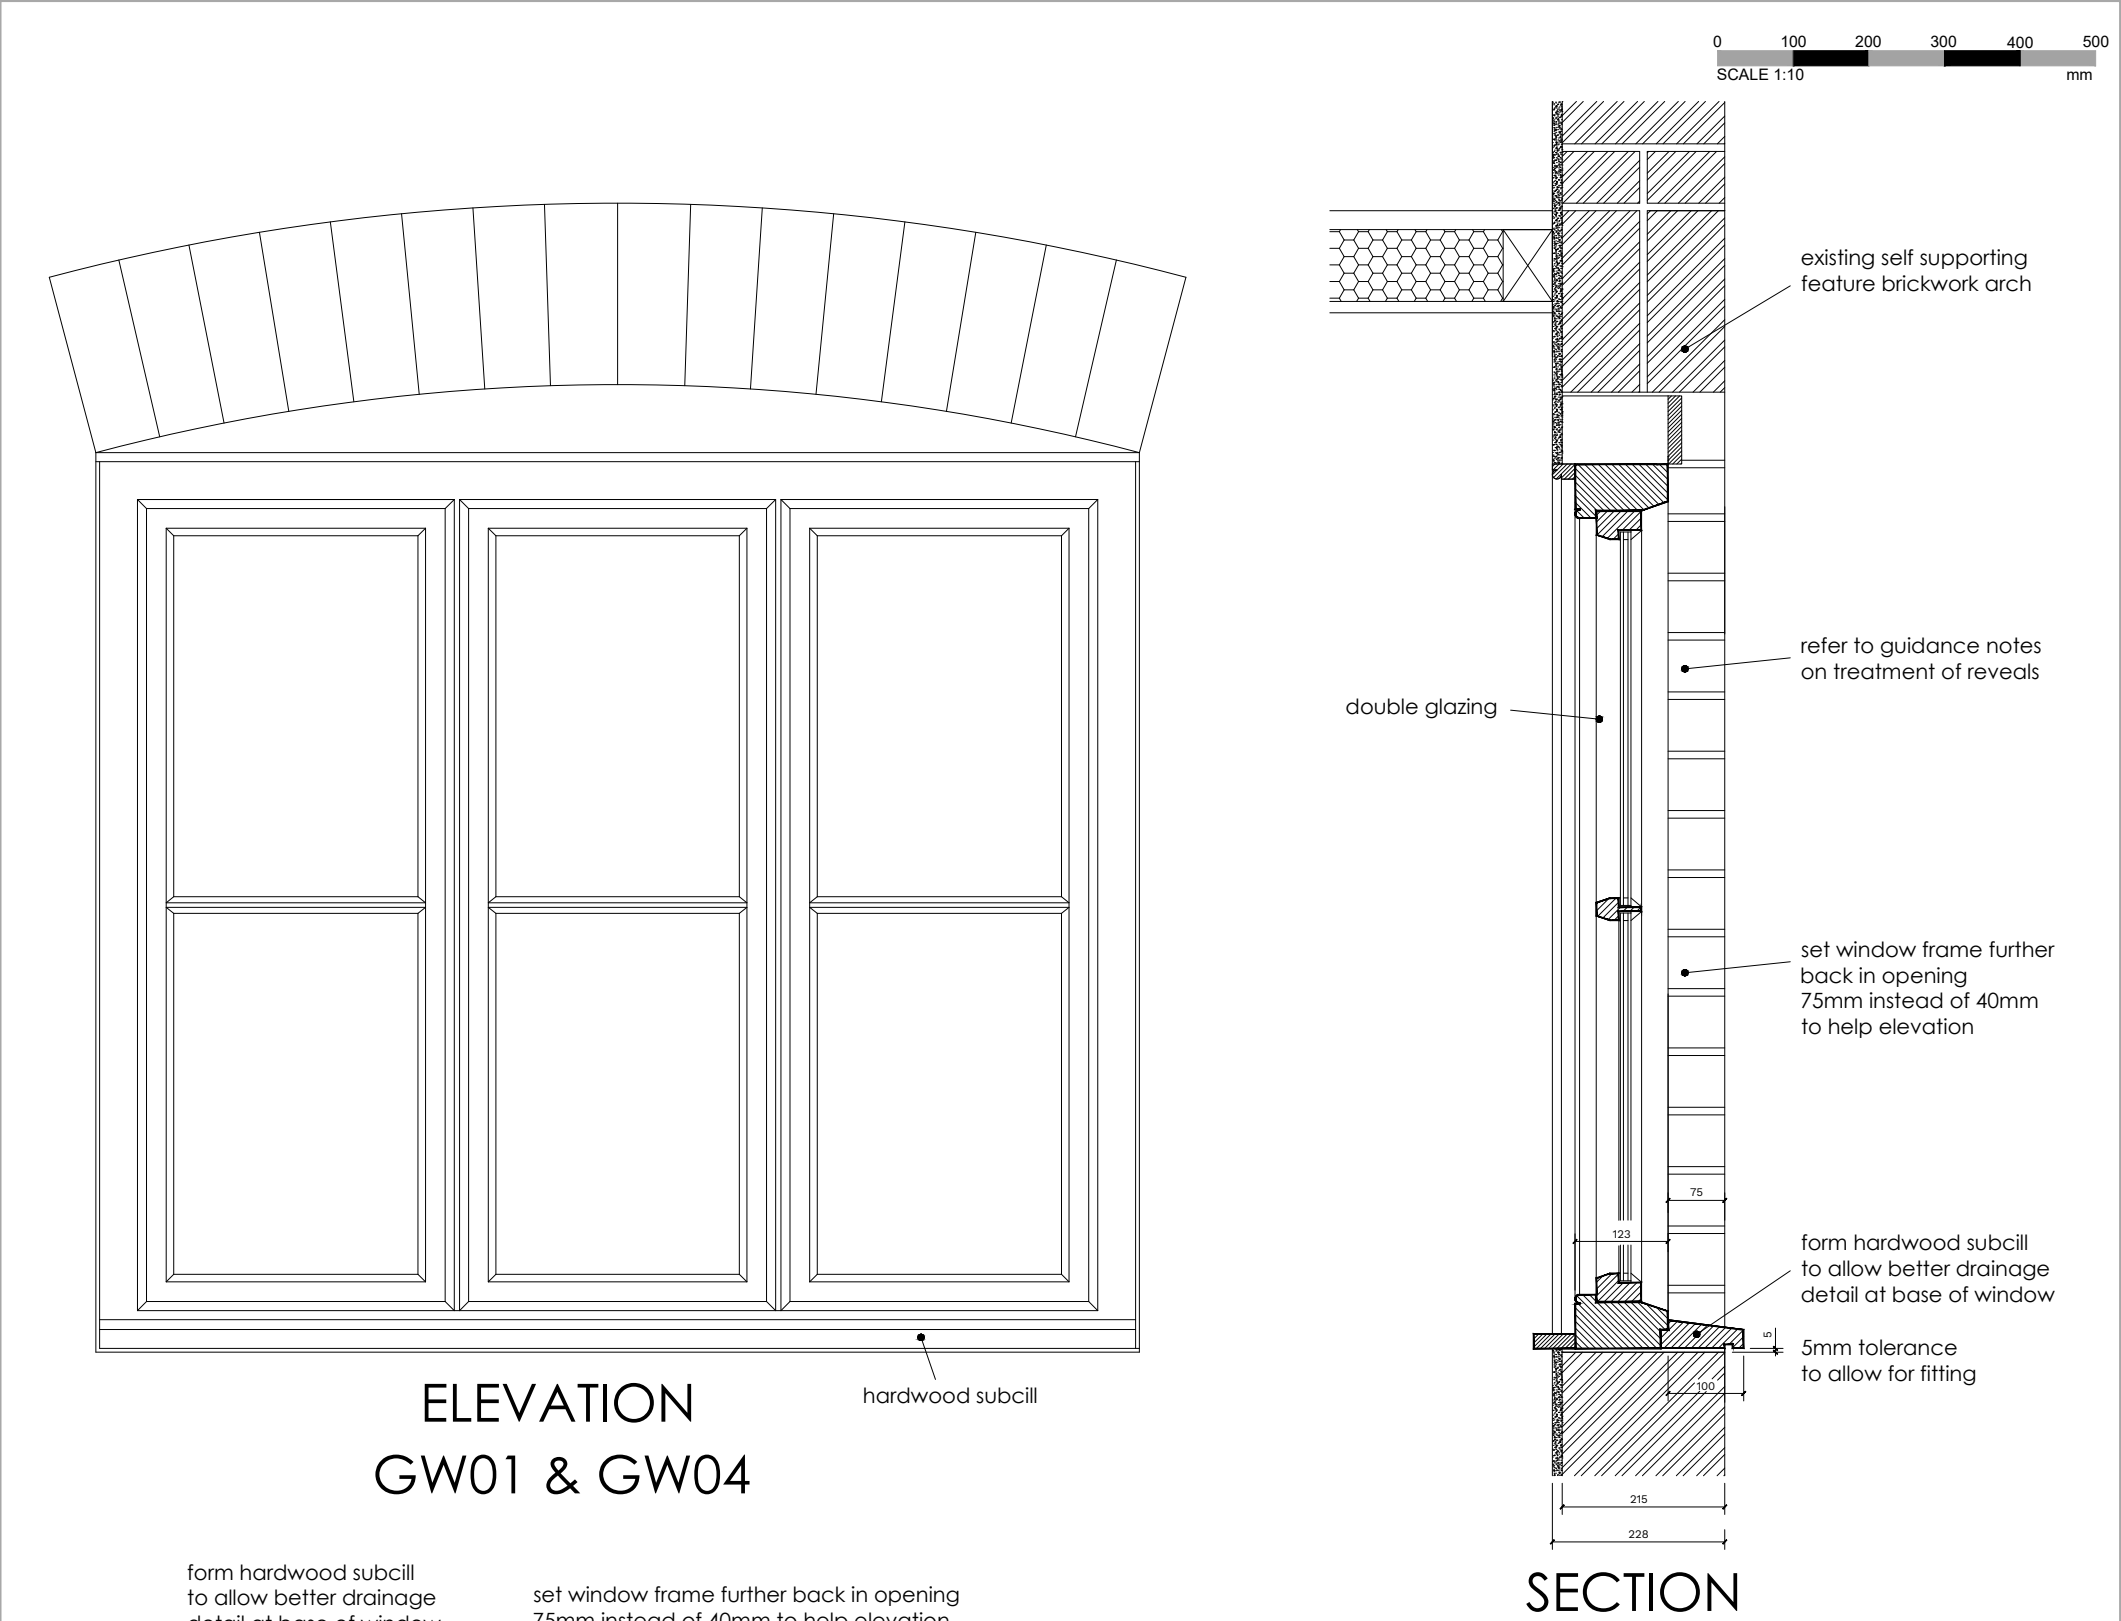

Example of Window Ironmongery
Pewter Shepherds Crook
Casement Stay



Example of Window Ironmongery
Pewter Shepherds Crook
Espagnolette Window Fastener

CLIENT:	CLARE GRICE	STATUS:	PLANNING				
PROJECT:	MOSS VILLA, CHAPEL LANE BRONINGTON, WHITCHURCH SHROPSHIRE SY3 3HR	SCALE @ A3:	1:10	DRAWN BY:	OH	CHKD BY:	PF
DRAWING:	JOINERY DETAILS PROPOSED WINDOWS GW01 & GW04	DRAWING No:	SA47065 -BRY-XX - DT- A - 005 _ B	DATE:	04.04.23	REVISION:	
				BERRY'S		RIBA	
				Chartered Practice		BEECH HOUSE SHREWSBURY BUSINESS PARK SHREWSBURY SHROPSHIRE SY2 6FG	
				TEL: 01743 271697 shrewsbury@berrys.uk.com www.berrys.uk.com		ORIGINATING OFFICE:	
				NORTH POINT:		DISCLAIMER NOTES:	
						B	
						A	
						REV	
						DESCRIPTION	
						DATE	
						BY	
						CHKD	
						09.08.23	
						OH	
						PF	
						20.04.23	
						OH	
						PF	
						DO NOT SCALE THIS DOCUMENT - USE FIGURED DIMENSIONS ONLY	
						ALL DIMENSIONS MUST BE CHECKED ON SITE PRIOR TO COMMENCEMENT OF ANY RELATED WORKS.	
						THIS DOCUMENT IS COPYRIGHT OF THE ORIGINATOR, IT MUST NOT BE ALTERED, REPRODUCED OR DISTRIBUTED WITHOUT PRIOR CONSENT.	
						THIS DOCUMENT MUST BE READ IN CONJUNCTION WITH ALL SUPPORTING DOCUMENTS PRODUCED BY THE ORIGINATOR AND OTHER PROJECT DISCIPLINES.	
						OS MAPPING OBTAINED FROM PROMAP LICENCE No. 100022432	
						REPRODUCED BY BERRY'S UNDER OS LICENCE No. 100003668	