



ARBORICULTURAL METHOD STATEMENT

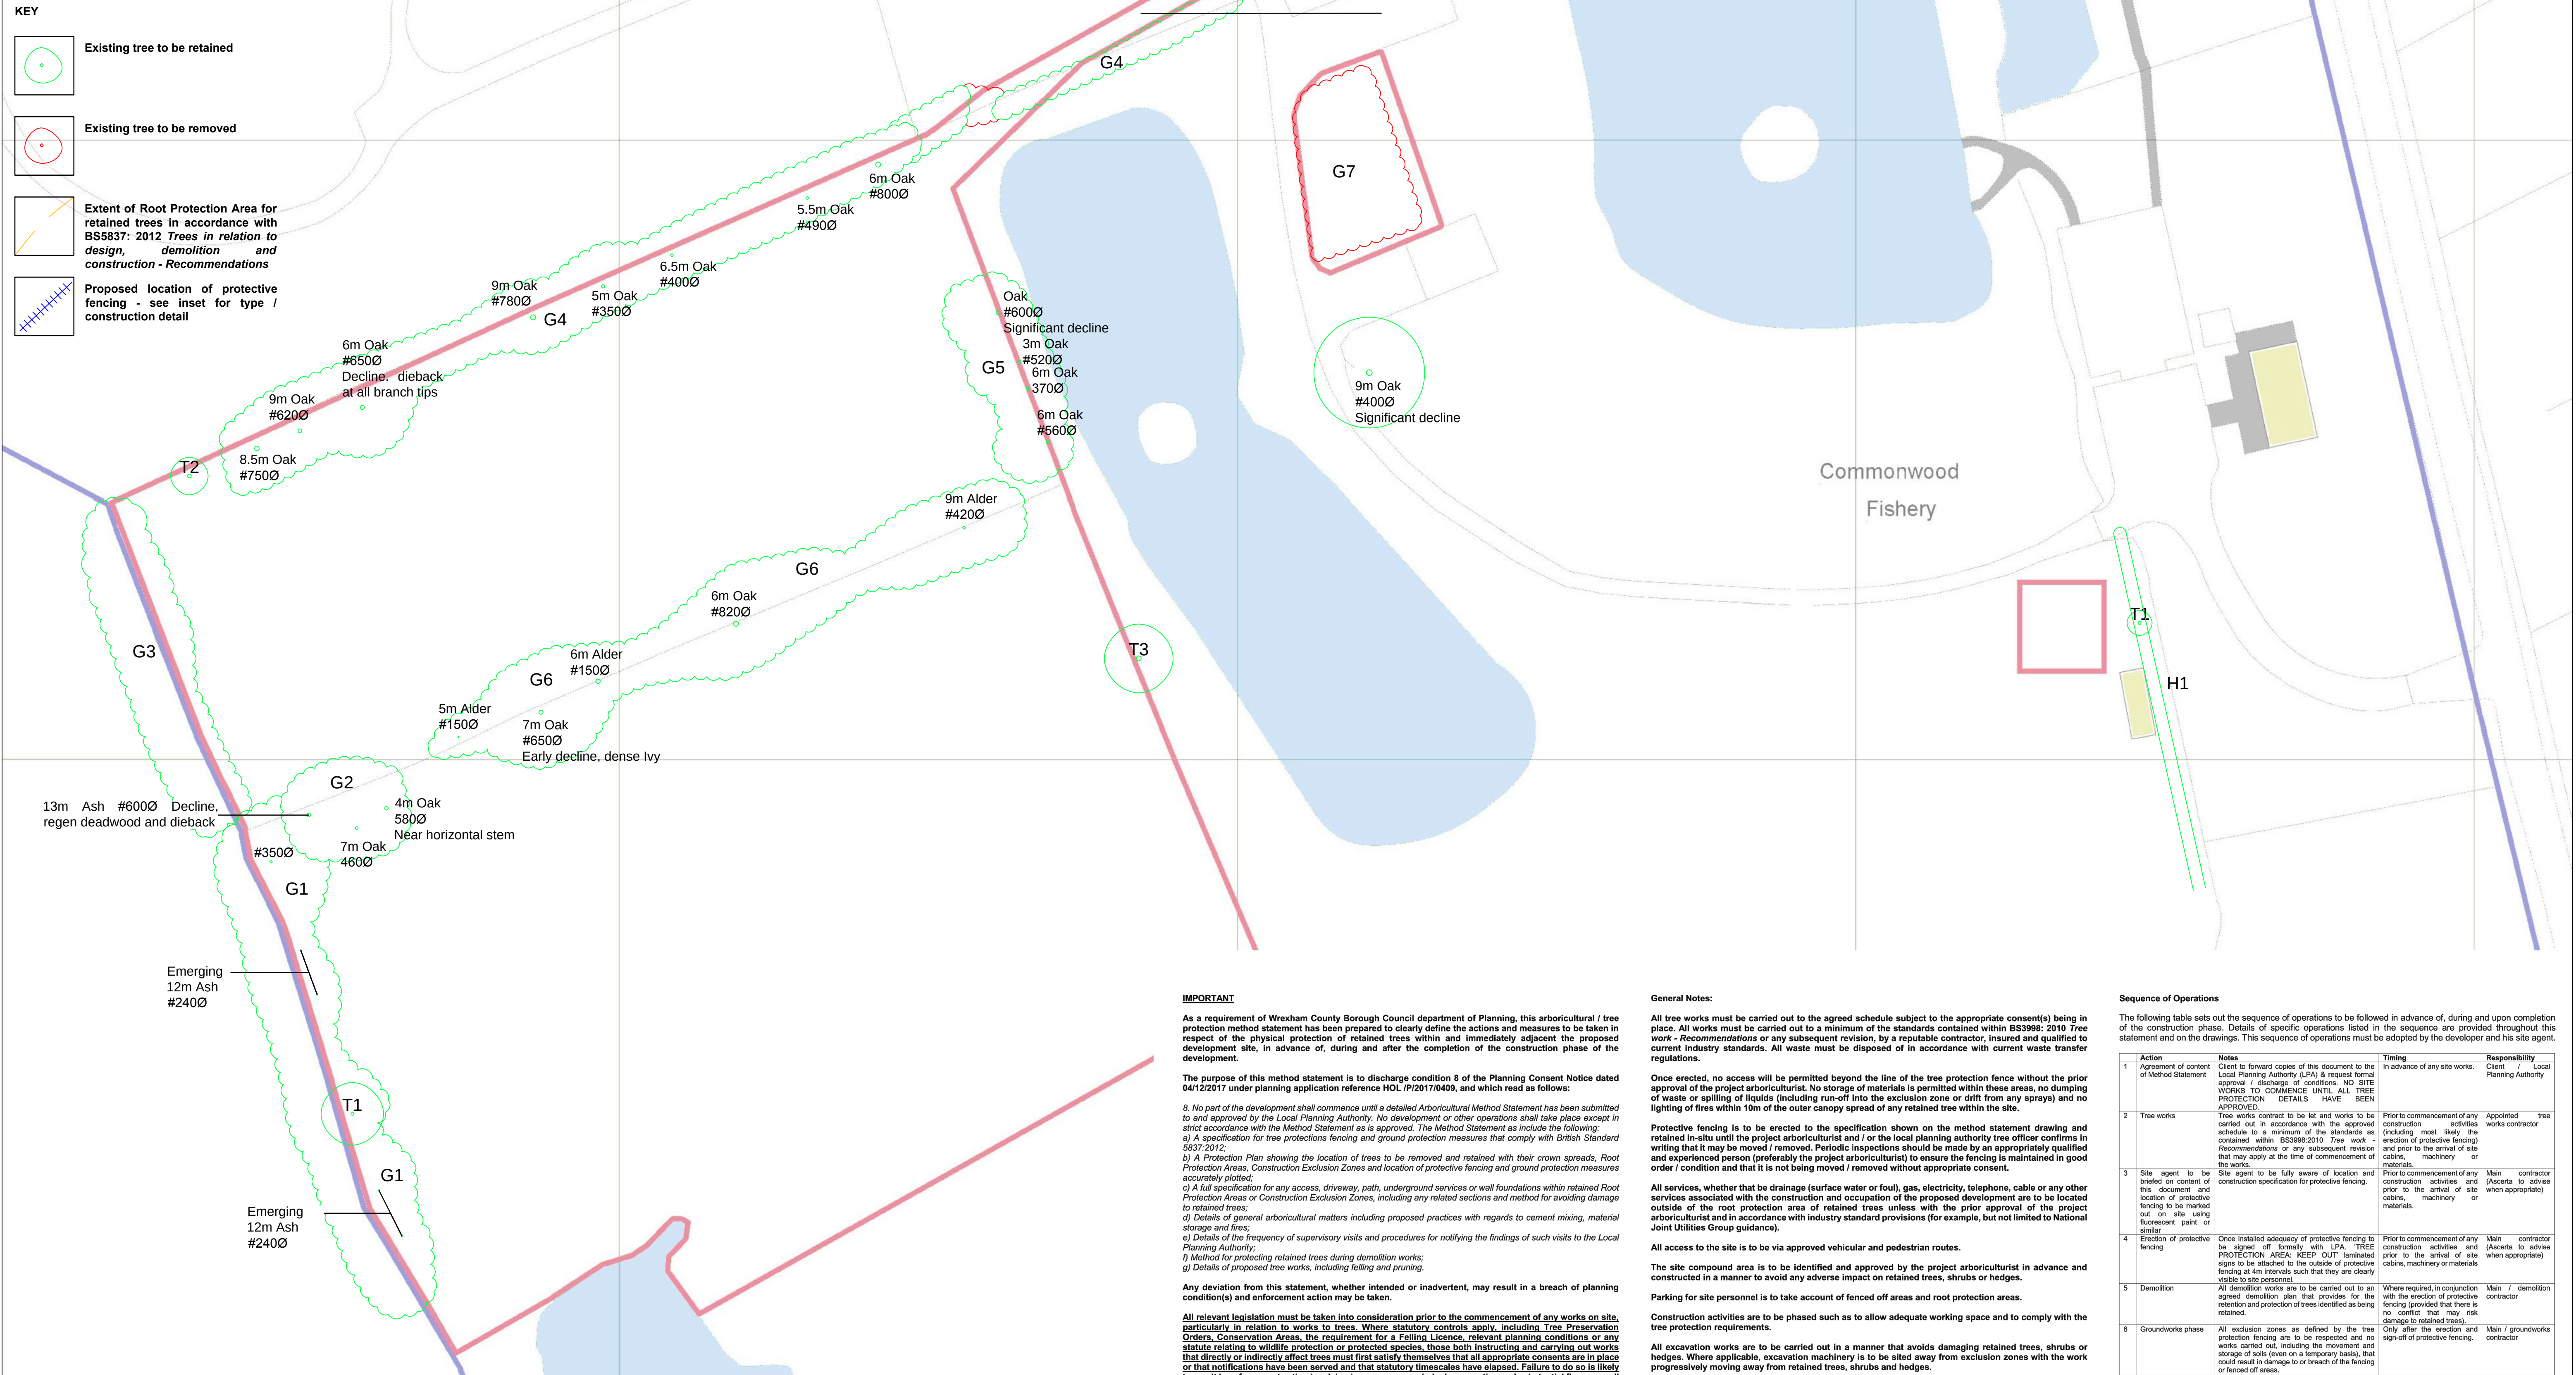

EXISTING LAYOUT 1:500@A0

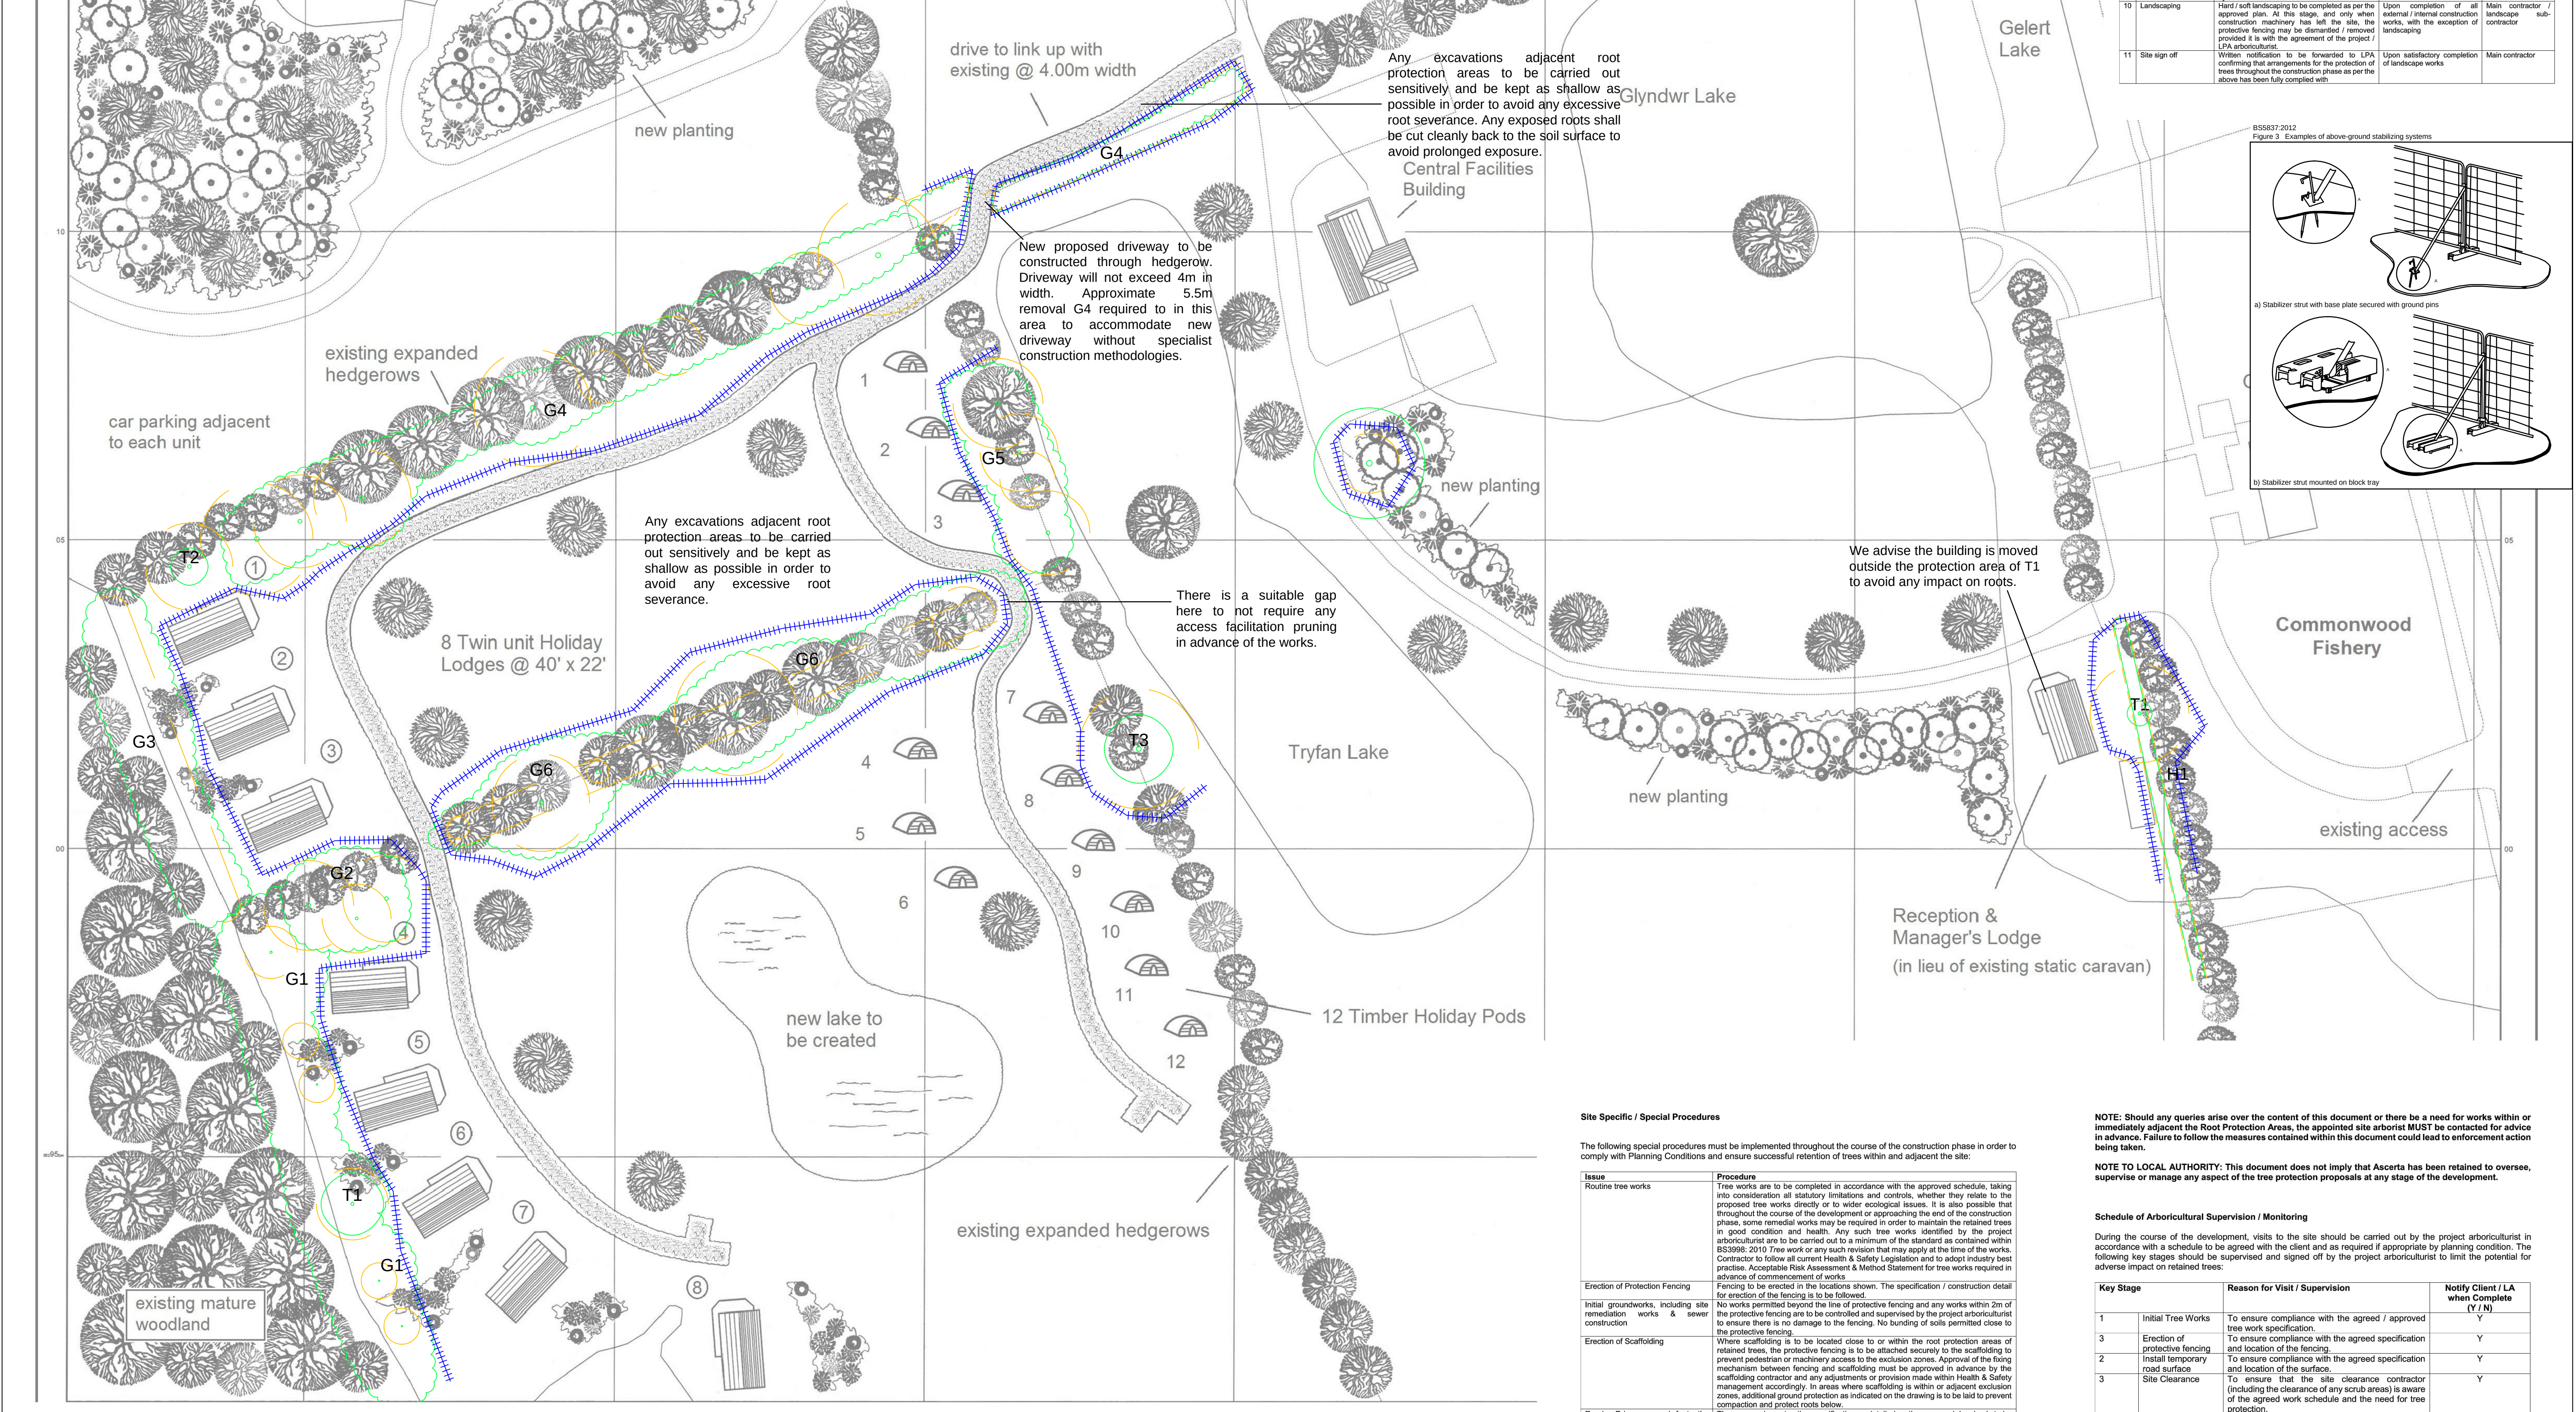

EXISTING LAYOUT 1:500@A0

Ascerta Landscape | Trees | Ecology

t: 0845 463 4404
e: info@landscapetreecology.com
Web: www.landscapetreecology.com

CLIENT: Commonwood Fishery

PROJECT: Commonwood Fishery, Wrexham

DRAWING TITLE: Arboricultural Method Statement

SCALE: 1:500 @A0
DATE: 23/01/2018
CHD: HS
CPK: HS
P.789.16.04

REV:

REV	DESCRIPTION	DATE
1	Initial Issue	23/01/2018

DO NOT SCALE

This drawing, including the design and technical information contained on it, is the property of Ascerta.

The drawing may only be used for the specific purpose for which it has been intended and may not be reproduced or copied without prior permission.

Tree Protection Area

Tree Protection Area (TPA) is defined as the area around a tree which is to be protected from damage during construction. The TPA is defined by the Root Protection Area (RPA) and the Root Protection Zone (RPZ).

Tree Protection Area

Tree Protection Area (TPA) is defined as the area around a tree which is to be protected from damage during construction. The TPA is defined by the Root Protection Area (RPA) and the Root Protection Zone (RPZ).