


Ground protection to be used within RPA of T1
over existing compacted stone access track,
if heavy plant machinery to be used on site

If foundations of proposed new building are
within the RPA of T8, then special measures
in the form of hand digging to check for
significant roots to be used. If significant
roots from T8 are present, then use screw
pile foundations with bridging lintels, to avoid
damaging tree roots

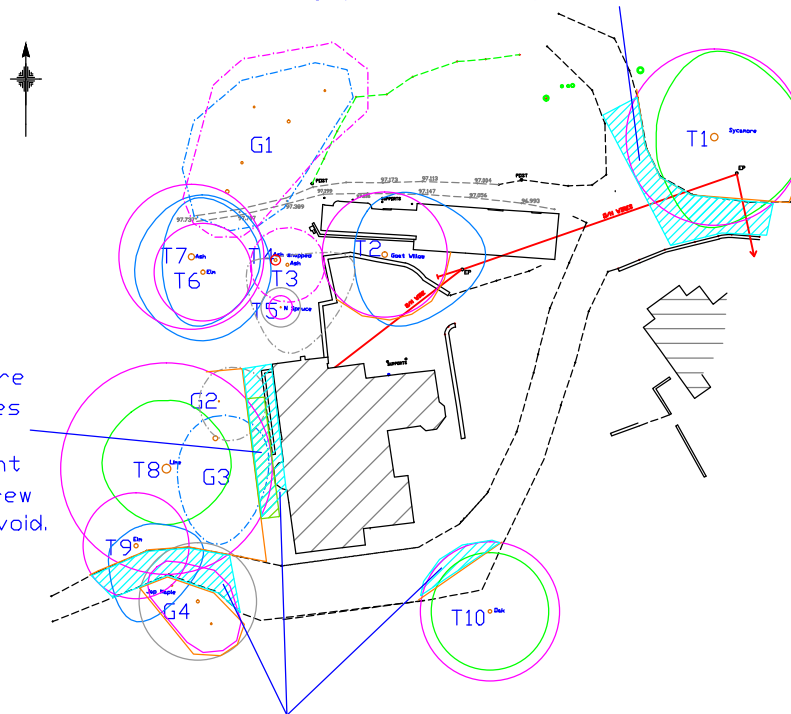

- Category A crown
- Category B crown
- Category C crown
- Category U crown
- Tree to be removed shown as dashed crown outline (colour according to category)
- Root Protection Area
- ▨ Hand Dig Area
- ▨ Ground Protection Area
- Protective Barrier

Ground protection to be used within RPAs
to facilitate working space and movement
of plant/machinery around the site

TREE PROTECTION PLAN