




Appendix C8

Bulk Earthworks Documentation – Haul Road

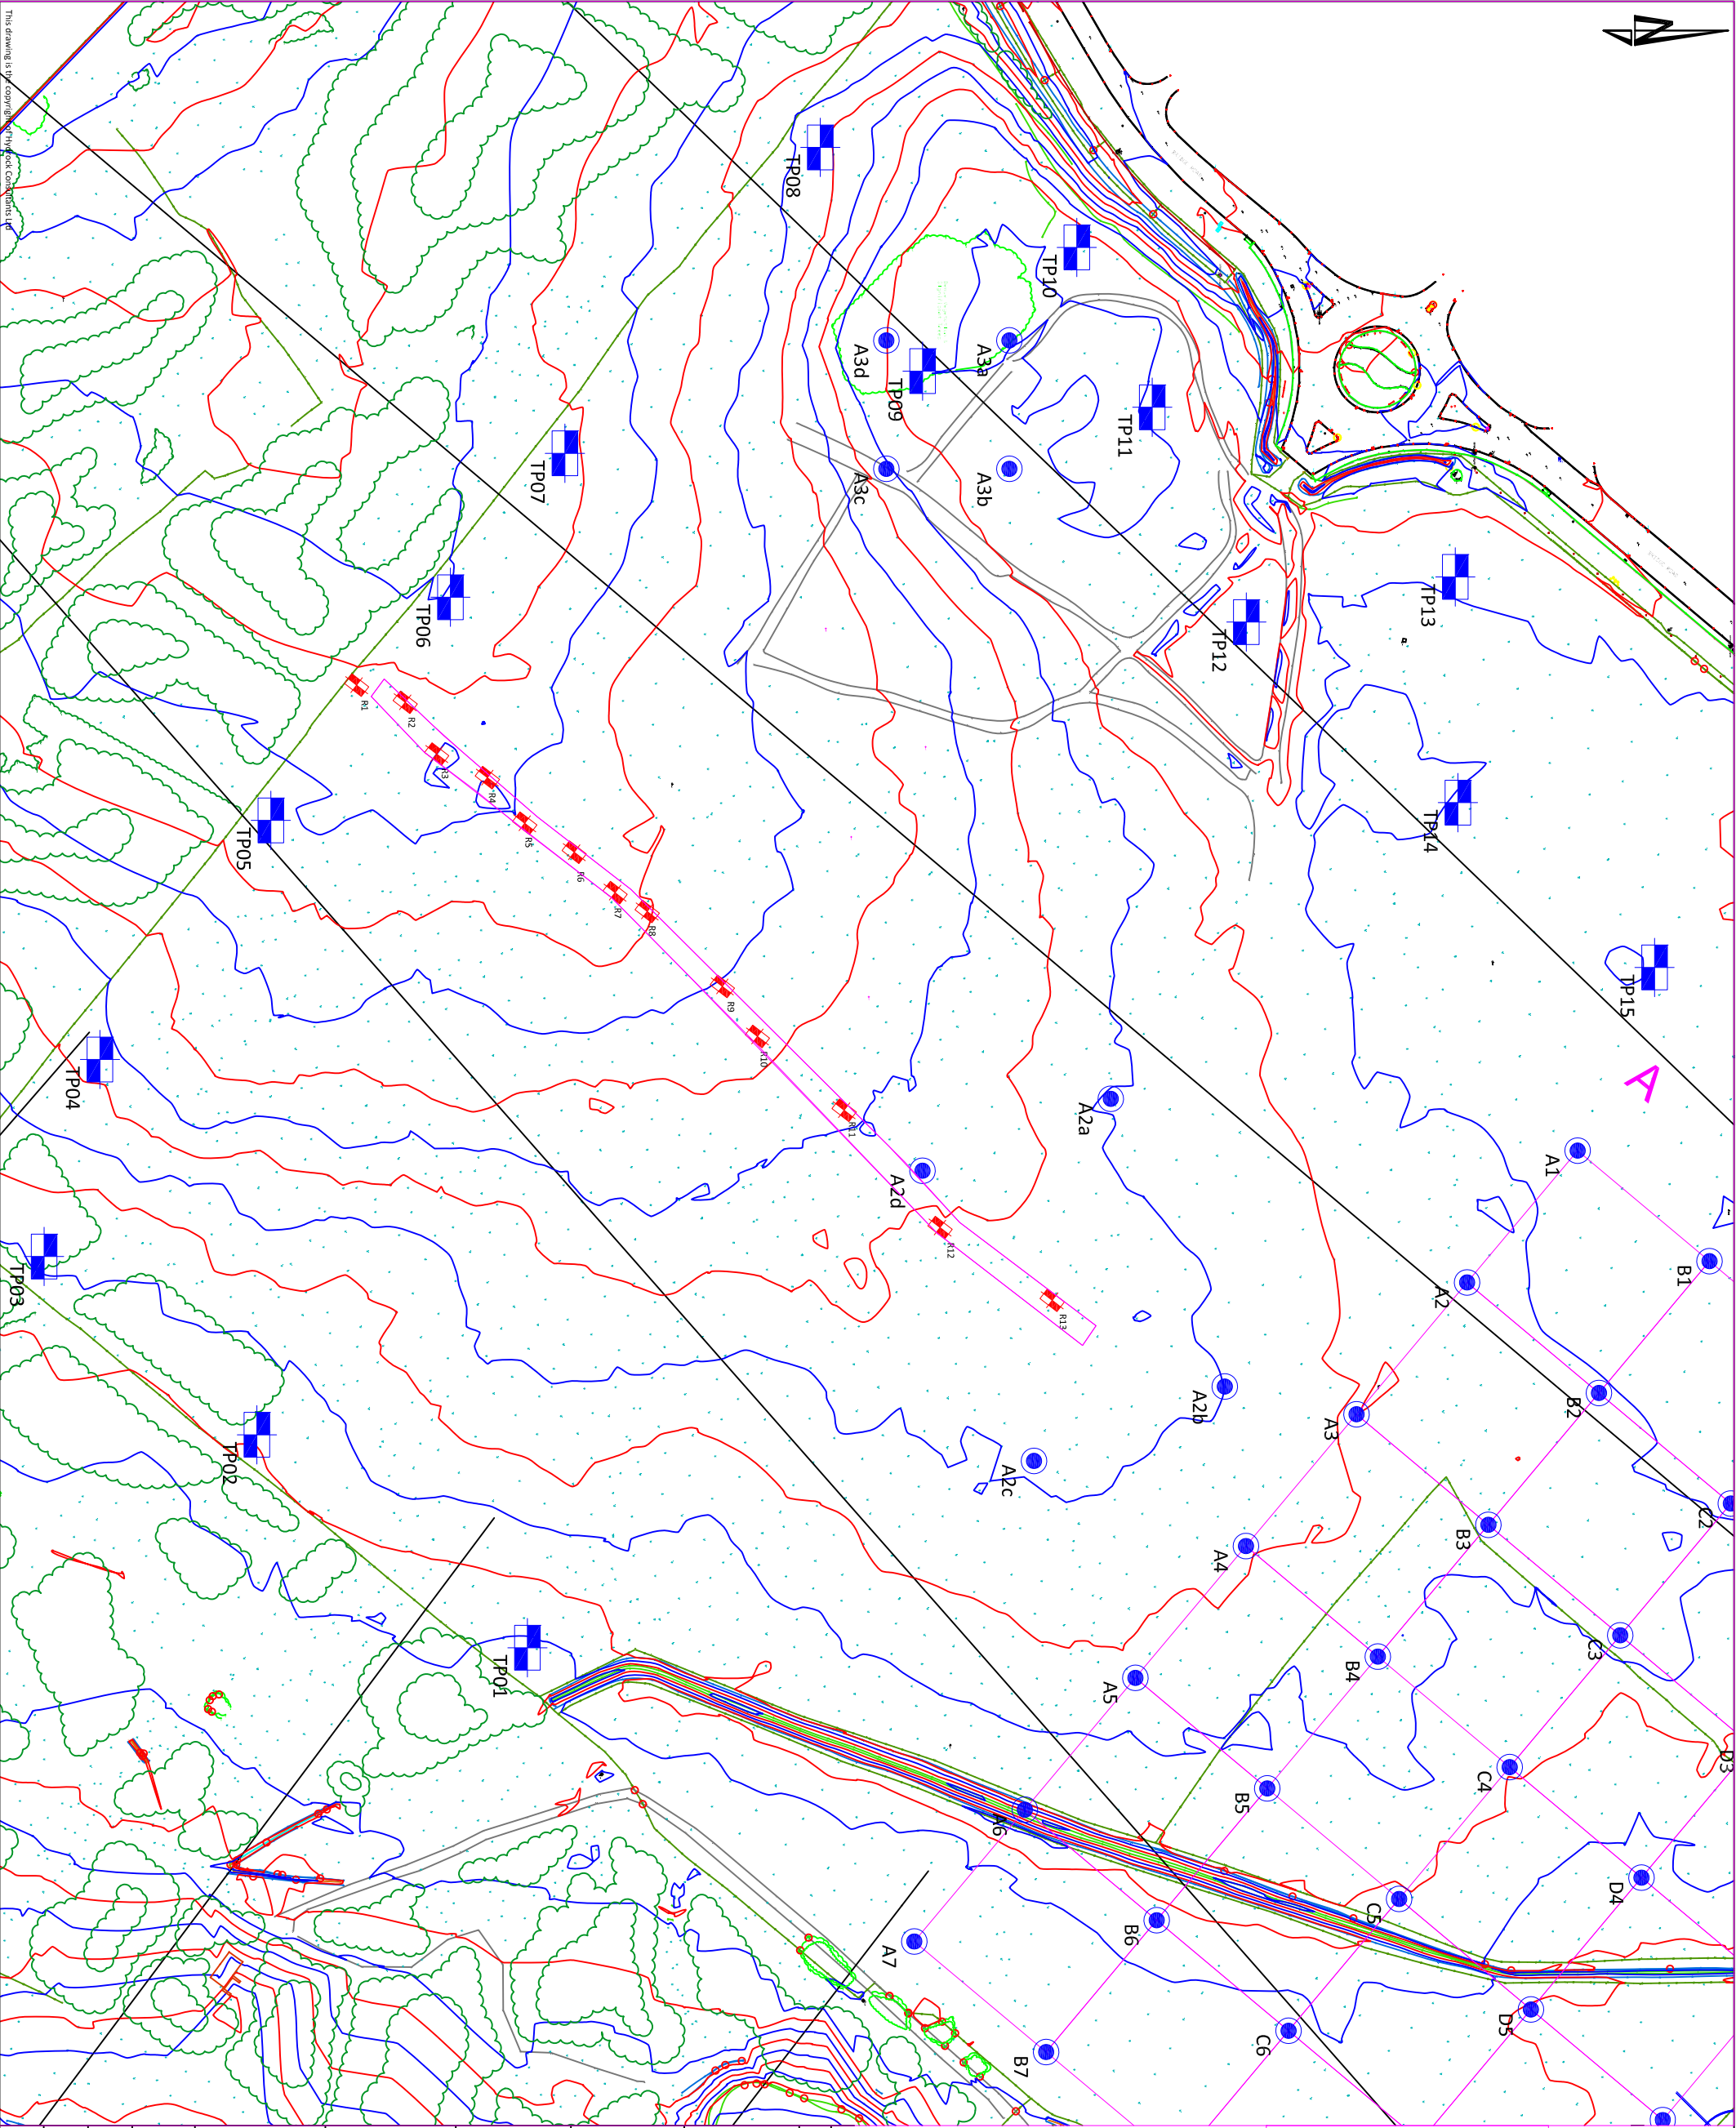

Notes:

1. All dimensions are to be checked on site before the commencement of works. Any discrepancies are to be reported to the Architect & Engineer for verification. Figured dimensions only are to be taken from this drawing.
2. This drawing is to be read in conjunction with all relevant Engineers' and Service Engineers' drawings and specifications.

Key

-  Haul Road Asbestos Trial Pits
-  Extent of historical haul road

Rev	Date	Description	By	Ckd

Architect:

**Hydrock**

Hydrock Consultants Ltd
Ridley Road
Sparton, Northampton
NN6 8LD
T +44 (0)1534 842888
www.hydrock.com

Client:

Lend Lease

Project Title:

North Wales Prison, Wrexham

Drawing Title:

Haul Road Asbestos
Investigation

Drawing Status:

DRAFT

Hydrock Job No:

C/14656

Drawn	Checked	Scale @ A3	Date	Issue Date
AL	EC	NTS	17/12/14	17/12/14
Drawing Number:				Revision:
C14656/D101				-

NOTIFIABLE METHOD STATEMENT FOR ASBESTOS REMOVAL WORKS

In compliance with the Control of Asbestos Regulations 2012

WARRINGTON
OFFICE
Lexia House,
West Yard,
Lyncastle Way
Barleycastle Trading
Estate
Appleton
Warrington,
WA4 4ST

Tel: 01925 214 110
Fax: 01925 214 139

Site Address	Job Number & revision
North Wales Prison (Proposed) Wrexham Industrial Estate Wrexham LL13 9QA	A02901-007.rev

Project Title	Description
Wrexham Prison	Litter pick of contaminated soil – Haul Rd Area 2 & Area 3



Client	Redhills	Client Address
Client contact	Gareth Cooper	Room 2:15 Hollinwood Business Centre Oldham OL8 3QL
Prepared and Contract Managed By	Luke Gumbley	
Contact Number	07920 571 865	
Date	21 st January 2015	

* Site Copy to Be Read, Acknowledged and Signed on Site.

**Client/Copy Does not require Signature.

CONTENTS

Section	Content
1	Contract Details and Attendances
	Contractors Name Hours of Work Client CDM Details Local HSE UKAS Local Accident & Emergency First Aid Contact Location of Muster Points Location of Welfare Facilities Details of Any Other Asbestos Licence Holders on Site
2	Risk and COSHH Assessment
3	Assessment of Asbestos Works
4	Method of Working
5	PPE, RPE & Equipment
6	Waste Removal
7	Site Plans
8	Documents Held on Site
9	Fire Procedure
10	Quality Assurance
11	Site Induction
12	Handover Procedure
Appendix 1.	Insurance Details
Appendix 2.	Waste Carriers Licence
Appendix 3.	Asbestos Licence

SECTION 1 – CONTRACT DETAILS AND ATTENDANCES

1.1 Contractor Name

Bagnall (UK) Limited, Lexia House, West Yard, Lyncastle Way, Barleycastle Trading Estate.
Appleton, Warrington, WA4 4ST, Telephone No: 01925 214 110

- Asbestos Contracts Manager: Luke Gumbley
Contact No: 07920-571865
- Supervisor: Nigel Wallace
Mobile No: 07795-258755
(The Supervisor will be on site at all times)
- Health & Safety Manager: Matt Dixon
Office No: 0113 270 0775
- Number of men on site – 8

1.2 Hours of Work (Date & Times)

Start Date: 20th January 2015
Finish Date: 30th January 2015
Hours of Work: 0800-1630

1.3 Client Name and Telephone Number

Company Name and Address: Redhills, Room 2:15 Hollinwood Business Centre
Oldham, OL8 3QL

- Office Contact: Gareth Cooper
- Telephone No: 0161 684 2351

1.4 Local Health & Safety Executive:-

HSE, Floor 3, Regent House, Regent Street, Wrexham, LL11 1PR

1.5 Independent UKAS Laboratory

The following independent UKAS accredited laboratory will be used and is contracted to Client:

Name: - Redhills Consultants – Gareth Cooper – 07824-151924

The work carried out by the independent analytical company will be as follows:-

- Personal Monitoring
- Background monitoring
- DCU clearance testing

1.6 Local Accident & Emergency

Wrexham Maelor Hospital, Croesnewydd Road, Wrexham, LL13 7TD
01978 291100

1.7 Names of first aiders:- Nigel Wallace – Bagnall Supervisor. Lend Lease also have first aiders on site, details will be provided during the site induction.

1.8 Location of Muster points:- Adjacent to the site offices.

1.9 Site Induction:- the induction will be undertaken by Lend Lease, Bagnall UK are to be inducted on the possible presence of unexploded bombs and the procedure to follow if a suspicious item is identified. Details of welfare facilities and site specific emergency procedures will be given during the site induction.

1.10 Details of any other Asbestos licence Holders: - None.

1.11 Welfare Facilities:- Canteen, toilets, microwave, fridge, hot and cold water.

SECTION 2 – RISK ASSESSMENT

Employer: Bagnall UK	Site: Wrexham Prison
Assessor Name: Luke Gumbley	Assessment Date: 19 th January 2015
Assessment Serial Number: A02901-007	
1. ACTIVITY /PROCESS BEING ASSESSED	
Litter pick of approximately 1290m3 of asbestos contaminated soil. Mainly asbestos cement containing Chrysotile, however, there are small areas of Asbestos Insulating board containing Amosite.	
2. Hazards Identified	3. PEOPLE AT RISK
1. <u>Working in close proximity of members of staff</u> The work area will be segregated off with a physical barrier using fence panels and the appropriate signage to restrict access. The Supervisor is to meet any deliveries of plant, Skips etc at the main entrance & escort them to the work area. 2no Banksman will be used when machines and skips are being moved into the working zone. 2. <u>Removal of soil containing loose asbestos debris</u> Dust suppression by the use of water and surfactant through a bowser sprayer. Use of RPE (half masks). HEPA Vacuums to be used for primary decontamination. DCU in place to be used for personal decontamination. Works to be carried out within segregated respirator zone. 3. <u>Electricity from leads (110v)</u> All electrical items to be DOP tested and leads have PAT test. Checks to be recorded. 4. <u>Generators</u> The generator is to be sited at least 5m away from the working zone to avoid fumes blowing into the respirator zone; the generator is to have a drip tray and a Spill kit will be available. Generators will be filled using a pump. 5. <u>Uneven surfaces</u> The operatives are wear ankle protecting boots with S/S midsole and steel toecaps due to uneven floor surface. Jones Bros will flatten the ground as far as is reasonably practicable. 6. <u>Manual handling of waste and tools</u> Manual handling is to be carried out by trained personnel; bags are to be filled ≤12kg. The Supervisor is to weigh random bags using his digital weigher. 7. <u>Working in close proximity to large machinery</u> The machine will have a banksman at all times, whilst the machine is undertaken removal works all other personnel are to retreat the designated zone away from the machine. Communication will be via 2 way radios held by the machine man, moxy driver, banksman and supervisor. Jones Bros will have a detailed method statement detailing the movement of traffic, a TBT is to be given to our operatives by Jones Bros. A banksman provided by Jones Bros is to escort Bagnall Uk operatives to the working zone and when returning from the working zone. The Banksman will instruct all machinery to stop for this process. 8. <u>Vehicle operations in bad weather conditions</u> Vehicle drivers will take extra care. Operatives are to wear hi-vis clothing and ensure they are clearly visible to moving vehicles. Stop work if weather becomes too severe. 9. <u>Ground works</u> As the excavation is being undertaken the ground will be assessed and stepped so that the soil will not collapse, safe access will be provided by Jones Bros.	Operatives / Analyst / machine drivers / banksmen

10. <u>Unexploded bombs</u> This site has been highlighted as a potential for presence of unexploded ordnance from the WW2 era. Information about this will be explained in the site induction. If at any time you suspect that you may have come across an unexploded bomb then work must stop immediately, the area should be secured and a supervisor contacted immediately. 11. <u>Live services</u> All local service drawings to be checked. CAT scan survey to be carried out prior to commencement of work. Services identified to be marked out on the ground. Permit to excavate to be obtained from Lend Lease. Jones Bros will have detailed information regarding any services. 12. <u>Machines working within the respirator zone</u> The machines will have an EPA filter this gives an efficiency of 97% of 0.3-0.5um and positive pressure within the cab. 13. <u>Reversing moxy machines</u> All machines will have a banks man. The driver will stay in his cab when being loaded with his windows and doors shut. 14. <u>Eye impact</u> Any operatives cleaning the machine with the power sprayer must wear protective glasses and impact visor. 15. <u>Noise</u> Ear protection will be worn by all personnel when working around the generators / sprayers, the area will be segregated off and signage applied.	4. Frequency and Duration of Exposure to the Risk																						
5. Control of Substances Hazardous to Health																							
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th style="text-align: left; padding: 2px;">Materials</th> <th style="text-align: left; padding: 2px;">Hazard</th> <th style="text-align: left; padding: 2px;">Risk Rating (after controls)</th> </tr> <tr> <td style="padding: 2px;">Idenden 30/330</td> <td style="padding: 2px;">Non-hazardous.</td> <td style="padding: 2px;">Very low</td> </tr> <tr> <td style="padding: 2px;">Propane</td> <td style="padding: 2px;"> Highly/ Extremely flammable </td> <td style="padding: 2px;">Low</td> </tr> </table>	Materials	Hazard	Risk Rating (after controls)	Idenden 30/330	Non-hazardous.	Very low	Propane	Highly/ Extremely flammable	Low														
Materials	Hazard	Risk Rating (after controls)																					
Idenden 30/330	Non-hazardous.	Very low																					
Propane	Highly/ Extremely flammable	Low																					
7. Environmental																							
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th style="text-align: left; padding: 2px;">Aspect</th> <th style="text-align: left; padding: 2px;">Impact</th> <th style="text-align: left; padding: 2px;">Risk Rating (after controls)</th> </tr> <tr> <td style="padding: 2px;">Asbestos Waste</td> <td style="padding: 2px;">Pollution</td> <td style="padding: 2px;">Low</td> </tr> <tr> <td style="padding: 2px;">Drainage of DCU Water</td> <td style="padding: 2px;">Pollution</td> <td style="padding: 2px;">Low</td> </tr> <tr> <td style="padding: 2px;">Chemicals (lubricants/ Foams/ Glues/ Surfactant)</td> <td style="padding: 2px;">Pollution</td> <td style="padding: 2px;">Very Low</td> </tr> <tr> <td style="padding: 2px;">Fuel Oils/ Diesel</td> <td style="padding: 2px;">Pollution</td> <td style="padding: 2px;">Low</td> </tr> <tr> <td style="padding: 2px;">Waste Timber & Polythene</td> <td style="padding: 2px;">Pollution</td> <td style="padding: 2px;">Very Low</td> </tr> <tr> <td style="padding: 2px;">Non Hazardous Wastes</td> <td style="padding: 2px;">Pollution</td> <td style="padding: 2px;">Low</td> </tr> </table>	Aspect	Impact	Risk Rating (after controls)	Asbestos Waste	Pollution	Low	Drainage of DCU Water	Pollution	Low	Chemicals (lubricants/ Foams/ Glues/ Surfactant)	Pollution	Very Low	Fuel Oils/ Diesel	Pollution	Low	Waste Timber & Polythene	Pollution	Very Low	Non Hazardous Wastes	Pollution	Low		
Aspect	Impact	Risk Rating (after controls)																					
Asbestos Waste	Pollution	Low																					
Drainage of DCU Water	Pollution	Low																					
Chemicals (lubricants/ Foams/ Glues/ Surfactant)	Pollution	Very Low																					
Fuel Oils/ Diesel	Pollution	Low																					
Waste Timber & Polythene	Pollution	Very Low																					
Non Hazardous Wastes	Pollution	Low																					
9. RISK RATING WITH PRECAUTIONS: MEDIUM	<table style="width: 100%;"> <tr> <td style="width: 33%;">Consequence:</td> <td style="width: 33%;">Likelihood:</td> <td style="width: 33%;">Rating:</td> </tr> <tr> <td colspan="3" style="font-size: small;"> Risk Rating= Consequence x Likelihood: 1 (Insignificant), 2 to 9 (Low), 10 to 15 (Medium), 16 to 25 (High) </td> </tr> </table>		Consequence:	Likelihood:	Rating:	Risk Rating= Consequence x Likelihood: 1 (Insignificant), 2 to 9 (Low), 10 to 15 (Medium), 16 to 25 (High)																	
Consequence:	Likelihood:	Rating:																					
Risk Rating= Consequence x Likelihood: 1 (Insignificant), 2 to 9 (Low), 10 to 15 (Medium), 16 to 25 (High)																							
10. MANAGEMENT ACTION:		11. PRIORITY FOR ACTION (DATE)																					
Method; Planning Audits		IMMEDIATE																					
12. Signature Of Assessor:	13. NEXT FORMAL REVIEW DATE: August 2016																						

SECTION 3 – ASSESSMENT OF ASBESTOS WORKS

Site Location	Item/Type	Condition	Fully controlled / locally controlled	Extent / Quantity	Scope of Work/Action	Fixing	Estimated fibre release after control measures	Completed (Y/N)
Haul Road – Area 2	Cement – Chrysotile & AIB Amosite	Poor / wet	Locally controlled	645m3	Removal	loose	<0.1f/ml	
Haul Road – Area 3	Cement – Chrysotile & AIB Amosite	Poor / wet	Locally controlled	645m3	Removal	loose	<0.1f/ml	

Sequence of works - SUPERVISOR TO COMPLETE

Site Location	Working zones created	Surface litter pick	Excavation works	Visual by analyst	Sign off
Haul Road					
Haul Road					

SECTION 4 – METHOD OF WORKING

Overview

A land remediation strategy has been produced by Hydrock for the entire site. During initial cement 'litter pick' works Asbestos Insulating Board was identified by Redhills & Bagnall operatives. Works stopped to be re-assessed and the extent of the asbestos to be quantified.

Further sampling / trial pits were undertaken within the haul road by Hydrock, information from Hydrock will be detailed within the supervisor site pack. The consultants Hydrock / Redhills are to mark out the area of work to ensure all contaminated soil is captured within the Haul rd. works.

The Haul Rd has been split into 3 phases, phase 1 has been complete, phase 2 & 3 are to run simultaneously.


The haul road is to be 'litter picked' to remove any visible ACM's, Jones Bros will undertake excavations whilst Bagnall apply dust suppression.

The soil will be placed into a Moxy machine and will be transferred to the contaminated soil drop off point along a dedicated route. The moxy machine is NOT to pull onto the contaminated Haul Rd. The Moxy machine is to be filled only halfway to prevent any excess soil over spilling onto the dedicated and potentially spreading the contamination.

Dust suppression will be applied when the Moxy machine is off loading by Bagnall.

Communication will be by way of 2 way radios, each banksman & driver will have a radio, the Site Supervisor will also have a radio. The banksman is to coordinate the machinery and Moxy ensuring no operatives are within the zone whilst the machines are working.

- Supervisor to instruct Banksman that digging works can commence.
- Banksman to ensure no personnel within the vicinity of the machines and instruct the machine drivers to commence.
- Supervisor to instruct Banksman to cease works.
- Banksman to inform machine drivers to stop excavating
- Machines to track away, place buckets on floor and turn off engines.
- Banksman to confirm operatives can enter zone.
- Supervisor & analyst to inspect the zone
- Supervisor to confirm with banksman that digging can commence.
- Banksman to ensure no personnel within the vicinity of the machines and instruct the machine drivers to commence.

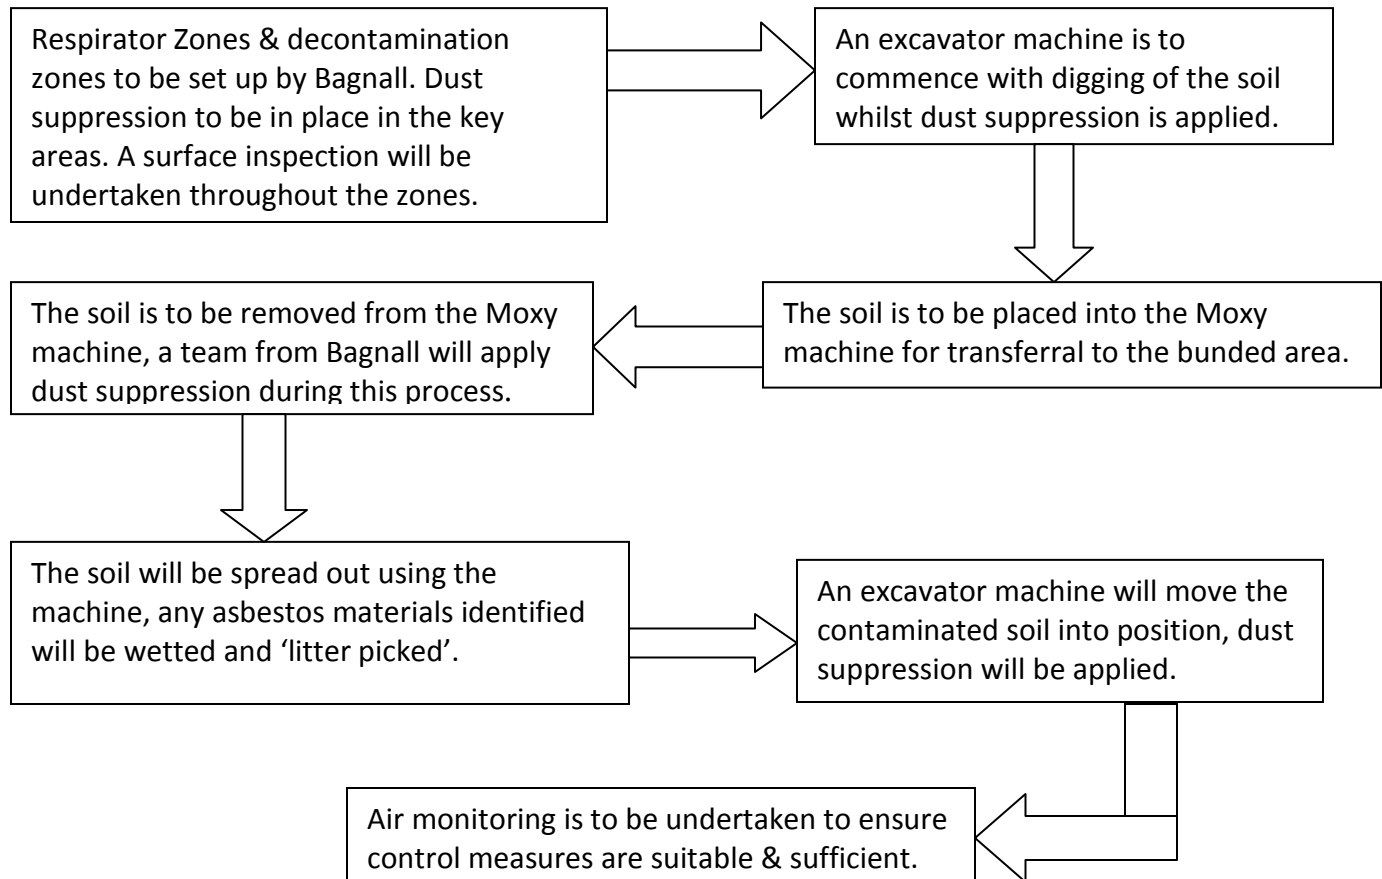

Site set up

Respirator zones

Respirator zones will be created using physical barriers and signage to prevent unauthorised access, crowd barriers will be used.

2 levels of asbestos training will be required within the respirator zones:-

Cat C - will be for the fully trained asbestos removal operatives provided by Bagnall who will be adequately wetting the contaminated soil as it is dug at source and also as it is being off loaded into the pit.

Cat A – will be for the Machine drivers, Moxy drivers and the banksmen all provided by Jones Bros who have had the site specific training and also decontamination procedures.

Cat C and Cat A will have their own decontamination procedure and their own decontamination units. The decontamination procedures are detailed further on in this document.

The drivers will not be required to wear white coveralls and masks but will have an ori-nasal half mask and disposable coveralls within their cabs in the event of a breakdown, the machine driver will keep the windows and doors shut at all times and will track to the end of the respirator zone to the decontamination zone and exit his machine.

Personal monitoring has been undertaken within the cab of the machine, all results have come back satisfactory proving there is no exposure to the machine driver and control measures at source are suitable & sufficient.

The following tasks will be allocated per machine:-

- Machine driver – Cat A training
- Banksman – Cat A training
- Dust suppression at source – Cat C training
- Dust suppression at drop off – Cat C training
- Visual inspector / watching brief – Cat C training

Decontamination zones

Separate fencing will be placed adjacent to the respirator zone, signage will be applied confirming this zone to be the decontamination zone. A Geo-textile membrane will be placed on the floor of the decontamination zone. Hygiene units will be placed into the decontamination zones. A hygiene unit will be available for Cat A & Cat B personnel, signage will be applied identifying the Hygiene units. A storage chest will be sited adjacent to the Hygiene unit for operatives to store the dirty wellington boots, these will be bagged up prior to being placed into the storage chest.

Waste route roads

Waste routes for the Moxy drivers will be identified on site, a suitable track has been identified by Jones Bros which is the shortest route from the working zone to the off loading point. The Moxy drivers are to try & maintain the same route as close as is reasonably practicable, the route cannot be barriered off as the remainder of the site will then be not accessible. The Supervisor and analysts will monitor the routes to ensure the contamination is not being spread.

Spraying zones

An operative & sprayer will be located in areas as shown on the sketch plans, these will have fencing around with signage, the banksmen are to coordinate the movement of machinery and pedestrian traffic to and from the zones.

The asbestos waste skip will be sited in the area shown on the sketch plans, this will have fencing around to prevent unauthorised access. The skip is to be locked shut when no Bagnall personnel are in attendance and will have an asbestos sign displayed. Waste will be placed into the waste compartment of the company vehicle, the vehicle will be driven across to the waste skip. Air monitoring will be undertaken at random intervals within the waste compartment.

On completion of setting the site up Lend lease are to issue a permit to dig, this will be issued on a daily basis. The Bagnall Supervisor will now issue his permit for works to commence.

Operatives are to enter the working zones through the correct procedure set out further on in this document.

Excavation works.

Water bowzers will be sited as shown on the sketch plans with a fine mist spray attachment. The bowser will be filled with water and a surfactant prior to be taken to the working zone, which will be used to minimise any possible/potential airborne release of fibres when the excavating the soil.

The excavator is to be switched off and the bucket is to be placed onto the floor, operatives will now undertake a surface litter pick of the area. If any asbestos containing materials are identified then dust suppression will be applied and the asbestos material will be placed into a red & clear asbestos bag.

The operatives will now retreat to the spraying zone and prepare for applying dust suppression.

The Banksman will inform the machine driver & Moxy driver to commence with the excavation works using the 2 way radios.

As the excavation is being undertaken dust suppression will be applied from the spraying zones. The soil will be placed into the Moxy which will then drive along the dedicated route to the drop off point.

If during the excavation works Asbestos containing materials are identified then the analyst / consultant will signal the banksman to stop the machines and Moxy from continuing, the machines are to back away and place the bucket on the floor, the engines will now be turned off. The Banksmen will now instruct the operatives to enter the area to pick the asbestos material. The Banksmen are to ensure the area is safe to do so.

A machine will be sited in this area with another spraying zone applying dust suppression. An excavator machine will gather the soil and spread it about evenly to allow a thorough litter pick to be undertaken and visual by the analyst.

Once satisfied the next load will be dropped in for further litter picking.

The area will be stockpiled ready for further sampling / inspection by others. The area containing the contaminated soil to be capped will have the fencing remaining around for the duration of the works with signage applied.

Decontamination of Plant.

The area will remain segregated off; operatives are to enter the working zone in white coveralls and half masks.

On completion of works the back of the Moxy machines are to be washed using the sprayers. The excavator tracks & buckets are to be washed and inspected by the analyst.

The air inlet filter of the cab of the machine is to be removed and replaced by Bagnall UK, the filter is to be disposed of as asbestos waste. This will be undertaken as per the Bagnall standard procedure.

Fibre suppressant

Water/surfactant will be sprayed from the bowser and lance that will deliver a fine mist spray directly on to the area being excavated and onto the bucket of the machine. The operative spraying down will be working directly in the view of the machine man and the banks-men, the banks-men will be identified by his hi vis vest which will be orange. The bowser is an 1100 ltr and will require 100 ltrs of fibre suppressant.

Asbestos waste will be placed into red & clear asbestos bags, the bags are to weigh <12kgs, the supervisor will weigh random bags to ensure they are below 12kgs. The supervisor is to ensure the correct manual handling techniques are used, operatives are to wear gloves when removing waste.

General

Any amendments to this Method Statement on site will be made by the Supervisor not the Operatives; the Supervisor will contact the Contracts manager prior to any amendments being made. Any amendments to the Plan of Work will be communicated to the operatives by carrying out a Tool Box Talk.

SECTION 5 – PPE, RPE & EQUIPMENT

Personal Protective Equipment

- Type 3, category 5/6 Disposable overalls with elasticated hoods, wrists and ankles will be worn.
- White overalls will be worn for carrying out the works
- Steel toe boots with ankle support
- Protective gloves.
- Hard hats
- Hi-visibility vests
- Safety glasses
- Ear Protection

Respiratory Protective Equipment

We have selected the RPE, which is suitable to the job, the environment, and anticipated maximum exposure and to the wearer.

Respirator selection chart for protection against asbestos in air.

B(UK)L Type	EN No.	Filter	Protection Factor	
C. Filtering ½ masks without Inhalation valves	EN1827	P3	20	☐
Half mask and filter (Mask) (Filter) Sundstrom or similar with same protection factor	EN140 EN143	P3	20	☒
Full Face Mask (Mask) (Filter)	EN136 EN143	P3	40	☐
Power Assisted Masks (Mask) (Filter) Phantom or similar with same protection factor	EN12942 EN143	P3	40	☐

Equipment Schedule

<i>Hygiene Facilities</i>	8 man mobile shower
<i>Air Movers</i>	850cmh (within the shower)
<i>Fibre Suppressant and System</i>	Jet bowser sprayer with Idenden 30/330 diluted mix at 15:1 / handheld 5 litre pump sprayer with Idenden 30/330 diluted mix at 15:1
<i>Power supply</i>	generator
<i>Vacuum Equipment</i>	HEPA filtered vacuums
<i>Access Equipment</i>	Not applicable

SECTION 6 – WASTE REMOVAL


- All waste will be removed from the working area double bagged or double wrapped.
- Waste will be removed immediately to the van and taken to the waste skip.
- All waste will be stored in a sealed, locked, asbestos skip
- All waste will be removed from site using a certified waste carrier.
- All waste will be transported using a consignment note in accordance with the Hazardous Waste Regulations 2005.
- All asbestos waste will be taken to a licensed landfill or waste transfer station for subsequent disposal to a licensed landfill, waste will be disposed of at:-


Pilsworth, Bury

SECTION 7 – SITE PLANS


KEY

	H Type vacuum
	Location of 1 st aid points
	Access into the site
	Assembly Point
	Decontamination unit
	Location of van
	Location of sealed locked asbestos skips
	Water
	Waste route
	Asbestos contaminated soil
	Working zone

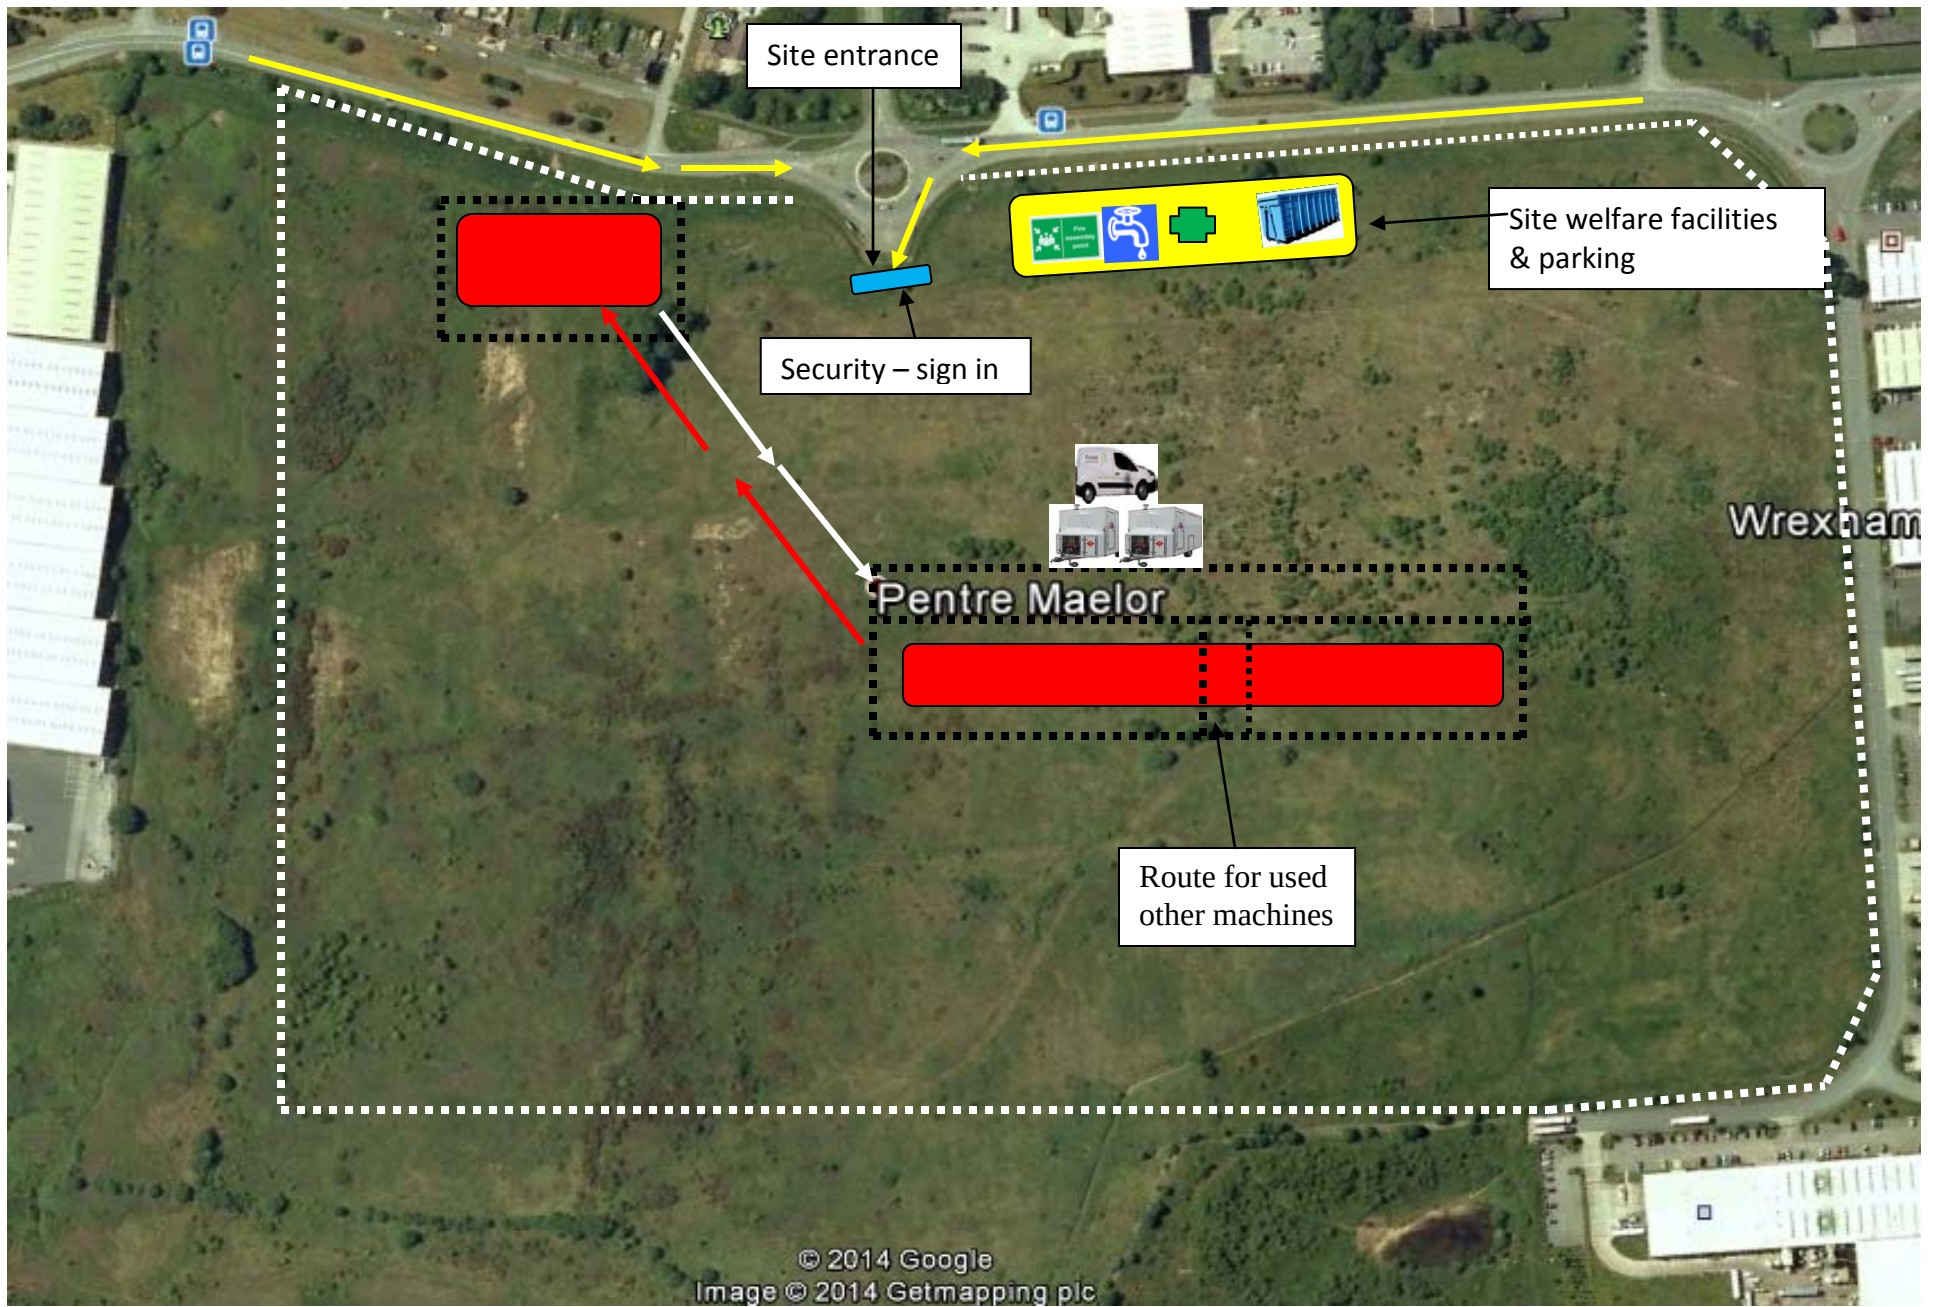

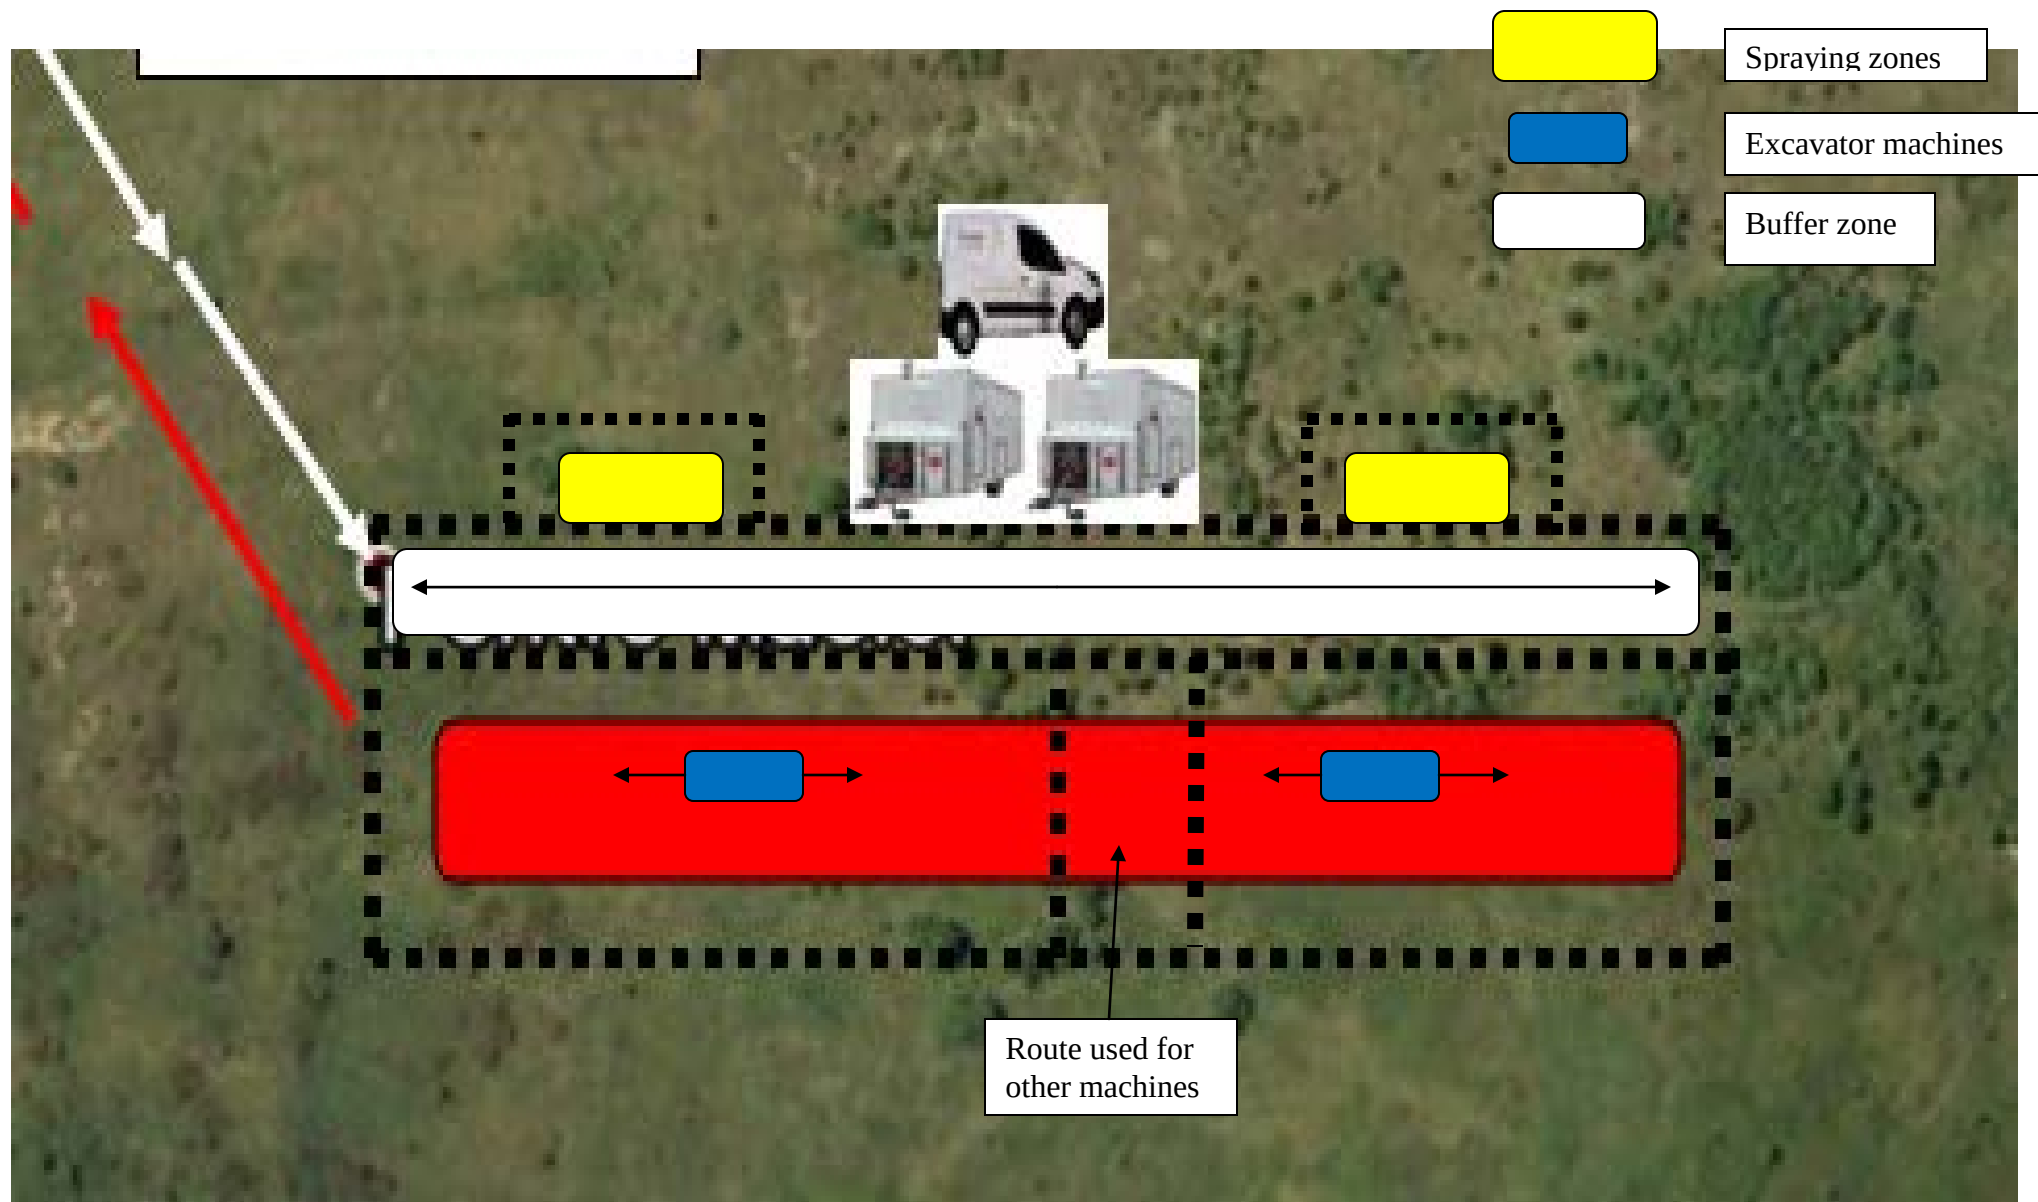

Welfare facilities, Parking & site establishment.

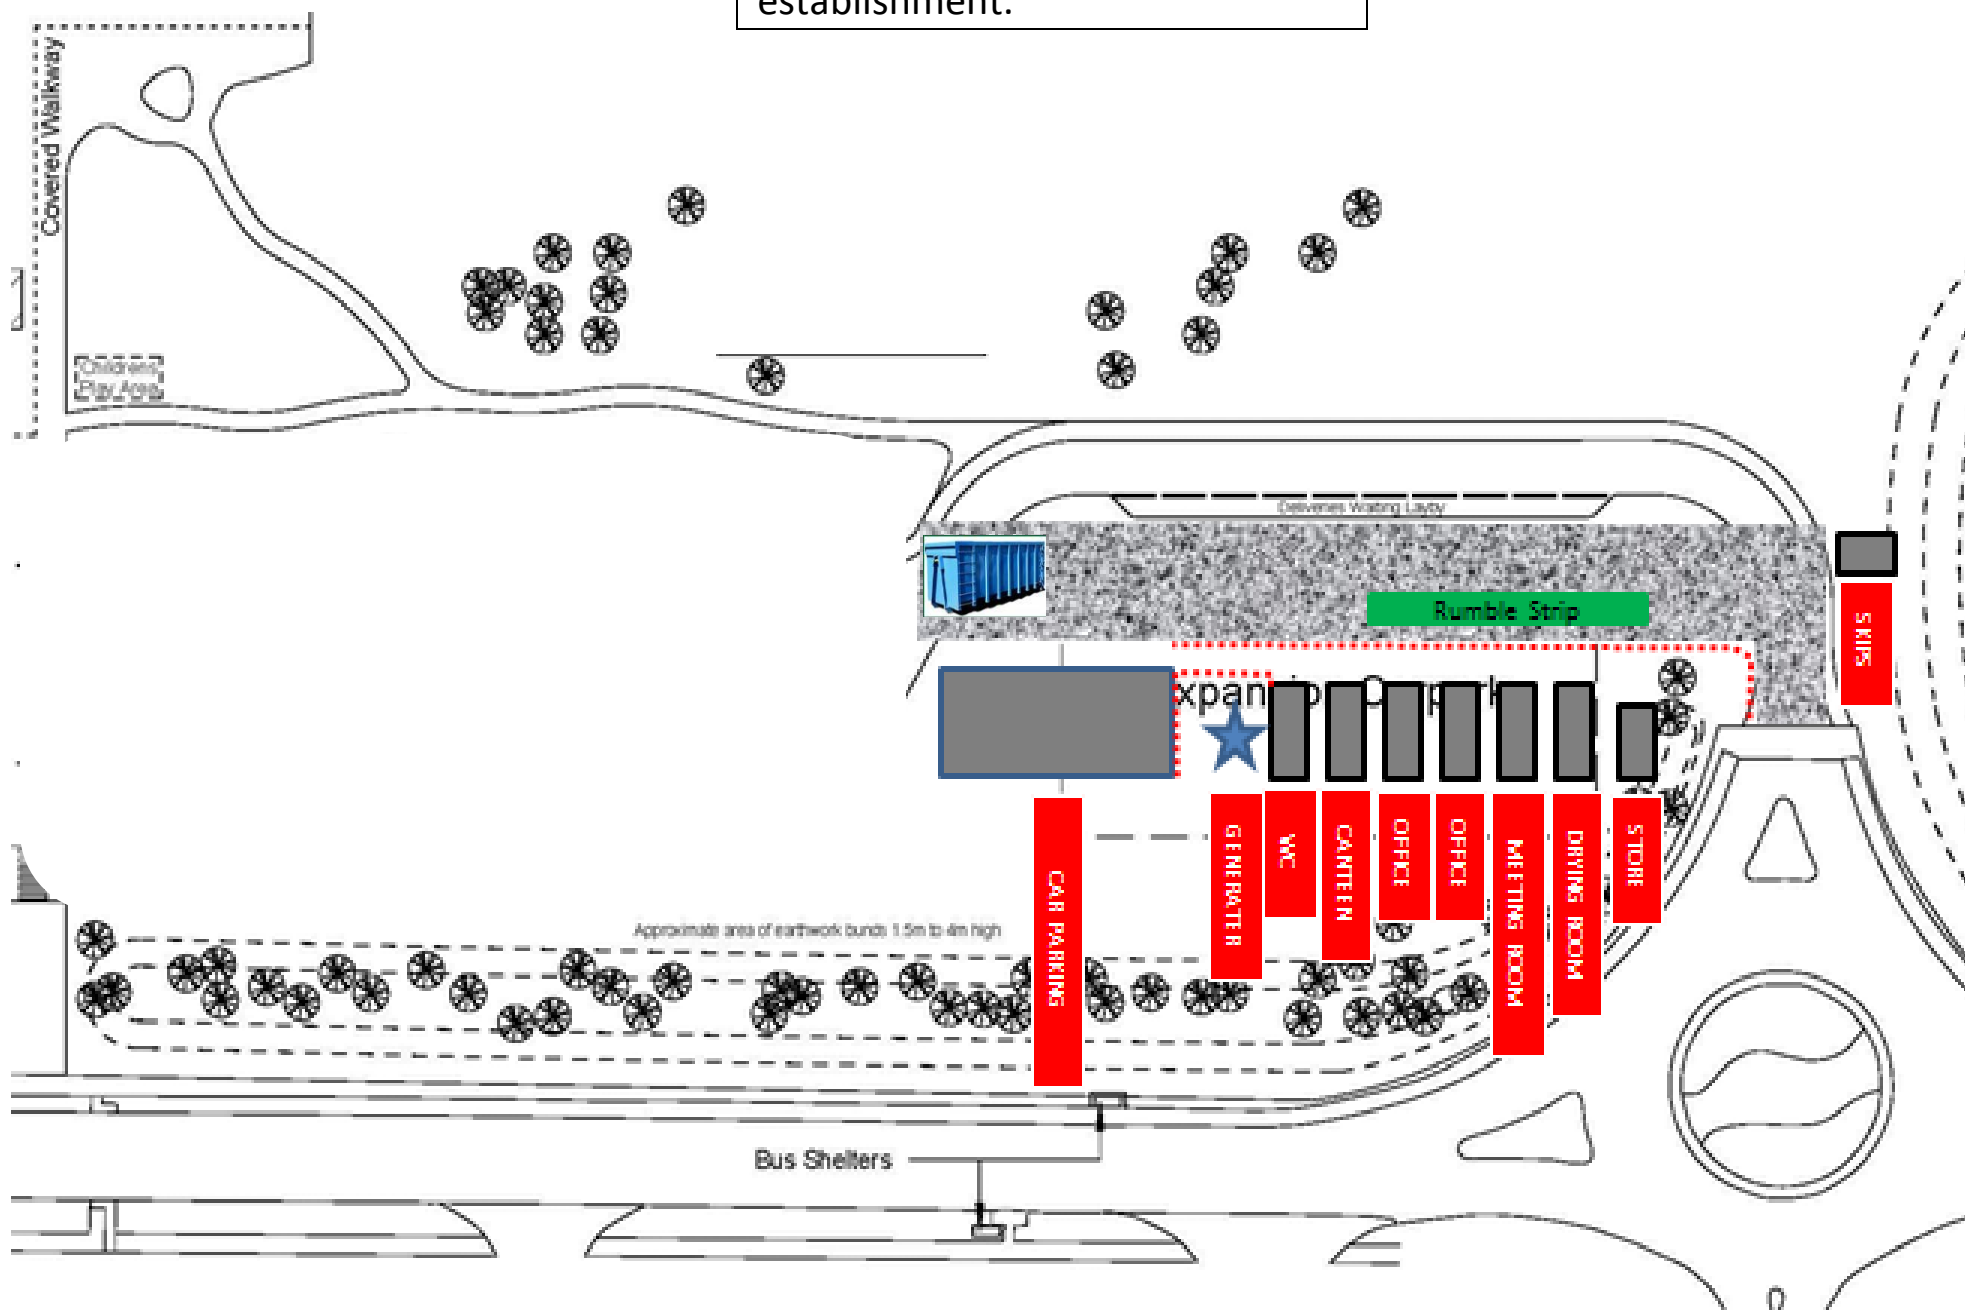

Preparation for entering a Contaminated Area No Enclosure for operatives Cat A

Enter the decontamination facility via the external door to the “clean” section.

Check RPE and record details in the site diary, put on cleaned and checked RPE and ensure a good fit using the mirror in the “clean” section.

Dress in new disposable white stripping overalls, over the top of the general work wear ensuring all underclothing is covered.

Pass through the external door of the “shower, dirty” section and walk strictly via the transit route into the working area.

Leaving a Contaminated Area No Area

Prior to leaving the working area vacuum off PPE and RPE.

Proceed to decontamination unit strictly via the transit route.

Enter decontamination unit through external door into “dirty” section. Remove overalls and footwear

DO NOT REMOVE RESPIRATOR

Pass through the connecting door into shower section, clean hands paying particular attention to fingernails with the nailbrush provided, clean face that has not been covered, remove respirator and clean and dry and Exit shower

Preparation for entering a Contaminated Area No Enclosure for operatives Cat C

Enter the decontamination facility via the external door to the “clean” section.

Check RPE and record details in the site diary, put on cleaned and checked RPE and ensure a good fit using the mirror in the “clean” section.

Removal all clothing and put on disposable underwear and thermal clothing.

Walk through into the dirty end of the DCU and put on thermal overalls or sacrificial overalls Dress in new disposable white stripping overalls, and put on wellingtons Pass through the external door of the “shower, dirty” section and walk strictly via the transit route into the working area.

In any cold weather operatives may request sacrificial clothing to wear under there white overalls these will be removed and stored for reuse in the dirty section of the decontamination unit, the use of these will be in the discretion of the operatives undertaking there works

Leaving a Contaminated Area No Area

Prior to leaving the working area vacuum off PPE and RPE.

Proceed to decontamination unit strictly via the transit route.

Enter decontamination unit through external door into “dirty” section. Remove overalls and footwear

DO NOT REMOVE RESPIRATOR

Pass through the connecting door into shower section, wash the hair, face clean hands paying particular attention to fingernails with the nailbrush provided, remove respirator and clean and dry, full shower the body ensuring all parts of the body has been washed, enter the clean area of the DCU and dry body and dress in general work wear

SECTION 8 – DOCUMENTS ON SITE

The following documents are kept on site:

- Copy of Licence
- ASB 5
- Employees records (Training, Medicals, Face fit certificates)
- Work zone inspection records
- DCU inspection records and DOP certificate for NPU
- Vacuum inspection records and DOP certificates
- RPE inspection records
- Air monitoring results
- Exposure details (weekly)
- Mask servicing certificates
- Permit to work documents

SECTION 9 – FIRE PROCEDURE

Fire Action

All personnel are to report to the fire assembly point shown on the sketch plans.

Anyone discovering a fire must raise the alarm.

SECTION 10 – QUALITY ASSURANCE

This document has been prepared and published by the undersigned using information provided in contract documents, and on the basis of site meeting/site visits.

Name: Luke Gumbley

Position: Contracts Manager

Signature: 

Date:

This document has been proof read and checked by a member of the contract support team to ensure it is of an approved quality standard prior to issuing to site.

Name: Carl Robinson

Position: Contract Manager

Signature:

Date:

SECTION 11 – SITE INDUCTION

The Supervisor is responsible for reviewing all methods contained within these documents as the work proceeds. Any amendments or revisions identified either before or during the contract should be directed to the Asbestos Contracts Manager for approval and incorporation into the latest revision. Any changes or amendments will be communicated to all parties concerned.

To be signed by Site Supervisor and all Operatives after reading the Method Statement and Asbestos Assessment.

I have had the method of work explained to me and I have read and understood the Method Statement, Asbestos Assessment and the documents detailed.

Site Supervisor / Foreman

Name:..... Sign:..... Date:.....

Operative

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

Name:..... Sign:..... Date:.....

SECTION 12 – HANDOVER PROCEDURE

Where there is a change of Supervisor/Foreman, it is the responsibility of the existing Supervisor/Foreman or the Operations Manager to ensure that the project is handed over correctly.

The Asbestos Assessment, Method Statement, associated documents and progress of the project are to be explained in full and recorded below.

Handed over by

Name:..... Sign:..... Date:.....

Additional Comments

.....
.....
.....
.....
.....
.....

Handed over to

Name:..... Sign:..... Date:.....

Additional Comments

.....
.....
.....
.....
.....
.....

Your Ref:

Our Ref:

29 May 2014

TO WHOM IT MAY CONCERN

Dear Sirs

RE: BAGNALL (UK) LTD

We confirm that our clients, Bagnall (UK) Ltd of Lexia House, West Yard, Lyncastle Way, Barleycastle Trading Estate, Appleton, Warrington WA4 4ST hold the following insurances which are currently in force.

BUSINESS ACTIVITIES

Demolition Contractors, Asbestos Removal Contractors, Skip Hire Contractors and Asbestos Surveyors.

EMPLOYERS LIABILITY

Insurer: Lloyds of London
Policy No: B0740A179140015
Period of Cover: 31/05/2014 – 30/05/2015
Limit of Indemnity: £10,000,000

Cover: Full cover against an Employer at law for damages and claimants costs in respect of injuries to employees arising out of and in the course of the employment, and also indemnifies Employers against all costs incurred in defending claims.

Extensions: Indemnity to Principal.

PUBLIC/PRODUCTS LIABILITY

Insurer: Lloyds of London
Policy No: B0740A179140015
Period of Cover: 31/05/2014 – 30/05/2015

Limit of Indemnity:	Public Liability	£10,000,000 any one claim and unlimited in any one period of insurance
	Products Liability	£10,000,000 any one claim and in the aggregate in any one period of insurance

Cover: Full cover in respect of liability at law for damages and claimants costs to members of the public, as a result of negligence causing:

- a) Accidental bodily injury including death and illness
- b) Accidental loss of or damage to property arising in connection with the Policyholder's business anywhere in the UK.

Excess: £2,500 in respect of third party property damage/third party bodily injury claims

- Extensions: (i) Indemnity to principal
(ii) Contingency cover in respect of actions of bona fide sub-contractors

CONTRACTORS ALL RISKS

Insurer: Aviva
Policy No: 24955553 CTC
Period of Cover: 31/05/2014 – 30/05/2015
Limits: Any one contract: £2,500,000
Hired in Plant: Any one item: £ 250,000

Extension: Continuing hiring charges

Excess: £2,500 each and every claim

PROFESSIONAL INDEMNITY

Insurer: Hiscox
Policy No: HU PI6 1488475
Period of Cover: 31/05/2014 - 30/05/2015
Limit of Indemnity: £5,000,000 any one claim and in the aggregate
Excess: £15,000 each and every claim

If you require any further information regarding our client's insurance cover, please do not hesitate to contact our office direct.

Yours faithfully

Paul Johnson

PAUL JOHNSON
COMPLIANCE & RESOURCES DIRECTOR E-Mail:paul.johnson@wdenis.co.uk



CERTIFICATE OF REGISTRATION UNDER
THE WASTE (ENGLAND AND WALES) REGULATIONS 2011

Regulation Authority	
Name:	Environment Agency
Address	National Customer Contact Centre 99 Parkway Avenue Sheffield S9 4WF
Tel:	03708 506 506
Fax:	0114 2626697

The Environment Agency certify that the following information is entered in the register which they maintain under regulation 28 of the Waste (England and Wales) Regulations 2011:-

Name(s) of registered carrier:	Bagnall (U K) Ltd.
Registered as an:	Upper Tier Carrier Broker Dealer
Registration number:	CB/BM3188BL
Business name (if any):	
Address of principal place of business:	Unit 7 Asher Court Barleycastle Lane, Appleton, Warrington, Cheshire, WA4 4ST
Tel: 01925 267 431	Fax: 01925 268 936
Date of registration:	15/12/2013
Date of expiry of registration (unless revoked):	14/12/2016
Signature of authorised officer of the regulation authority:	
	Date: 13/11/2013



255583



Licence to undertake work with asbestos

Licence Number 051204953

The Health and Safety Executive, in pursuance of the powers conferred on it by the Control of Asbestos Regulations 2006, licences

Bagnall (UK) Limited
Lexia House
West Yard
Lyncastle Way
Barleycastle Trading Estate
Appleton
WARRINGTON
Cheshire
WA4 4ST

("the licensee")

to undertake work with asbestos subject to the conditions below. The licence is granted from **25 February 2012** and shall remain valid until **24 February 2015** unless revoked in writing by an authorised Person.

CONDITIONS

1. This licence or a copy thereof, should be made available on request by the licensee for inspection by any person to whom the licensee submits a tender or quotation for work with asbestos and shall be available for inspection at all worksites. A copy of the licence shall accompany each notification required by Condition 2.
2. The licensee shall give notice in writing of the work to the appropriate HSE or local authority office at least 14 days before the work is commenced, or such other period as the authority will allow. The notice shall specify the type of work to be carried out, the likely duration of the work, the address of the premises at which the work is to be carried out and the date of commencement of the work activity. The enforcing authority must be informed in writing as soon as possible if this information changes. This condition will not apply for any work carried out with asbestos, which is subject to the exemptions specified in Regulation 3(2) of the Control of Asbestos Regulations 2006 or when the licensee hires out employees (at operative level) to other licensees.
3. (a) Prior to submitting the notice of work required by Condition 2 the following documents shall be prepared by the licence holder:
 - i) a suitable and sufficient written statement of the plan of work to be used.
 - ii) a suitable and sufficient written specification for the equipment for the protection and decontamination of those engaged in asbestos work and also for the protection of other persons, as appropriate to the work.
- (b) The licensee shall, on request by HSE and/or the local authority provide copies of the documents referred to in 3(a) and/or allow inspection of those documents as required.
- (c) Work carried out under the notice of work required by Condition 2 shall be carried out in accordance with the suitable and sufficient plan of work and the equipment, as specified in (a) (i) and (ii).

The plan of work and written specification must be provided on request and be available at the time of notification.

Signature

A person authorised by the Health and Safety Executive to act in that capacity

Name: **Greg Haywood**
Head of Asbestos Licensing Unit

Date: **27 January 2012**